
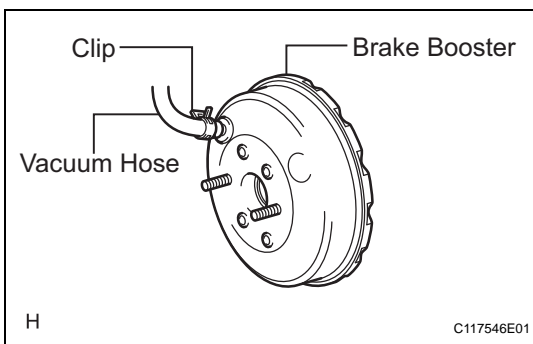
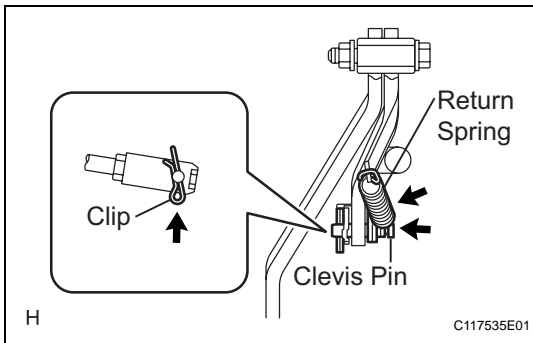


INSTALLATION

1. INSTALL BRAKE BOOSTER ASSEMBLY

- (a) Install the brake booster and a new gasket.
- (b) Install the booster and a new gasket with the 4 nuts.
Torque: 13 N*m (127 kgf*cm, 9 ft.*lbf)
- (c) Install the push rod clevis to the booster.

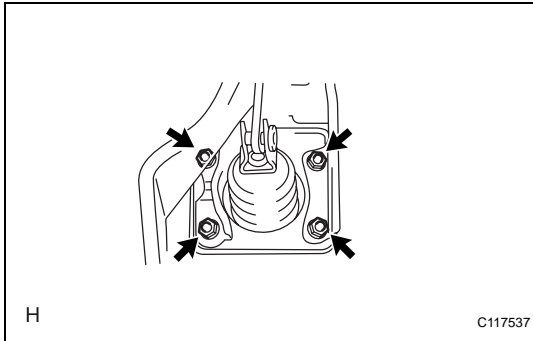

- (d) Apply lithium soap base glycol grease to the clevis pin.
- (e) Install the clip and clevis pin.
NOTICE:
The clip must be installed as shown in the illustration.
- (f) Install the brake pedal return spring.

- (g) Connect the vacuum hose to the brake booster and slide the clip.

2. CHECK AND ADJUST BRAKE BOOSTER PUSH ROD (See page [BR-13](#))
3. INSTALL BRAKE ACTUATOR ASSEMBLY WITH BRACKET (See page [BC-106](#))
4. INSTALL BRAKE MASTER CYLINDER SUB-ASSEMBLY (See page [BR-15](#))
5. CONNECT CLUTCH RESERVOIR TUBE (for Manual Transaxle)
 - (a) Slide the clip and connect the clutch reservoir tube.
6. INSTALL AIR CLEANER CAP SUB-ASSEMBLY
7. INSTALL BATTERY
8. FILL RESERVOIR WITH BRAKE FLUID (See page [BR-3](#))
9. BLEED AIR FROM BRAKE MASTER CYLINDER (See page [BR-3](#))
10. BLEED AIR FROM BRAKE LINE (See page [BR-4](#))
11. BLEED AIR FROM CLUTCH LINE (for Manual Transaxle) (See page [CL-11](#))
12. CHECK AND ADJUST BRAKE PEDAL HEIGHT (See page [BR-9](#))
13. CHECK BRAKE PEDAL FREE PLAY (See page [BR-9](#))

14. CHECK BRAKE PEDAL RESERVE DISTANCE (See page [BR-10](#))
15. CHECK BRAKE FLUID LEVEL IN RESERVOIR (See page [BR-6](#))
16. CHECK FOR BRAKE FLUID LEAKAGE
17. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
18. CHECK BRAKE ACTUATOR WITH INTELLIGENT TESTER
 - (a) Check the brake actuator with the intelligent tester (see page [BC-103](#)).