

REMOVAL

HINT:

- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.

1. REMOVE FRONT WHEEL


2. DRAIN BRAKE FLUID

NOTICE:

Wash off brake fluid immediately if it comes in contact with any painted surface.

3. REMOVE FRONT DISC BRAKE CYLINDER SUB-ASSEMBLY LH

- (a) Remove the union bolt and gasket from the front disc brake cylinder, and then disconnect the flexible hose.

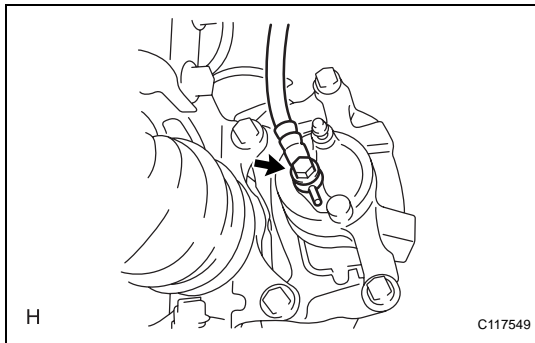

- (b) Hold the brake cylinder slide pin, and remove the 2 bolts and brake cylinder.

4. REMOVE FRONT DISC BRAKE PAD

- (a) Remove the 2 pads with anti squeal shims.

5. REMOVE FRONT ANTI SQUEAL SHIM



- (a) Remove the No. 1 and No. 2 shims from each pad.


6. REMOVE FRONT DISC BRAKE PAD SUPPORT PLATE

- (a) Remove the 2 support plates from the cylinder mounting.


7. REMOVE FRONT DISC BRAKE CYLINDER SLIDE PIN

- (a) Remove the 2 slide pins from the cylinder mounting.

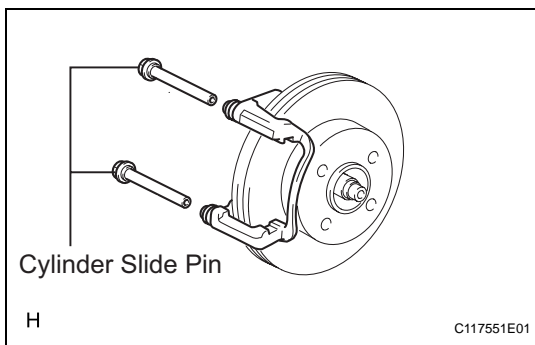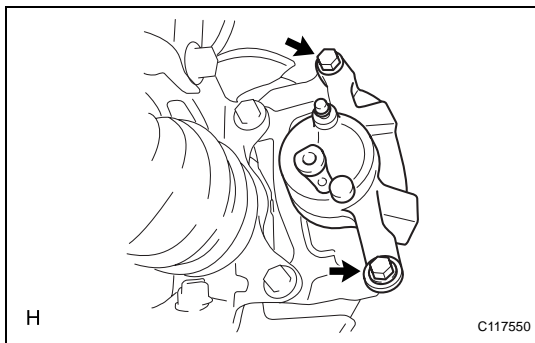


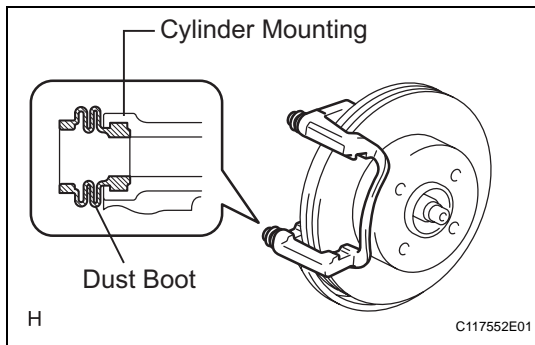**8. REMOVE FRONT DISC BRAKE DUST BOOT**

- (a) Remove the 2 bush dust boots from the cylinder mounting.

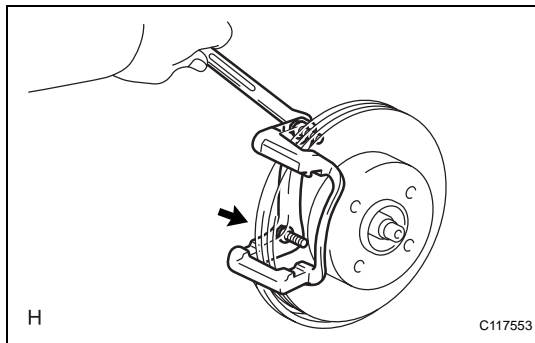**9. REMOVE FRONT DISC BRAKE CYLINDER MOUNTING LH**

- (a) Remove the 2 bolts and cylinder mounting.

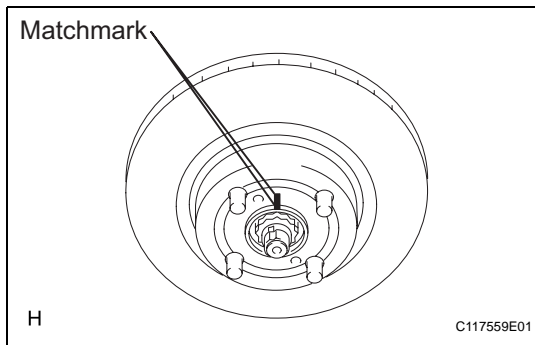**10. REMOVE FRONT DISC**

- (a) Place matchmarks on the disc and axle hub.
(b) Remove the disc.