



CLUTCH PEDAL COMPONENTS

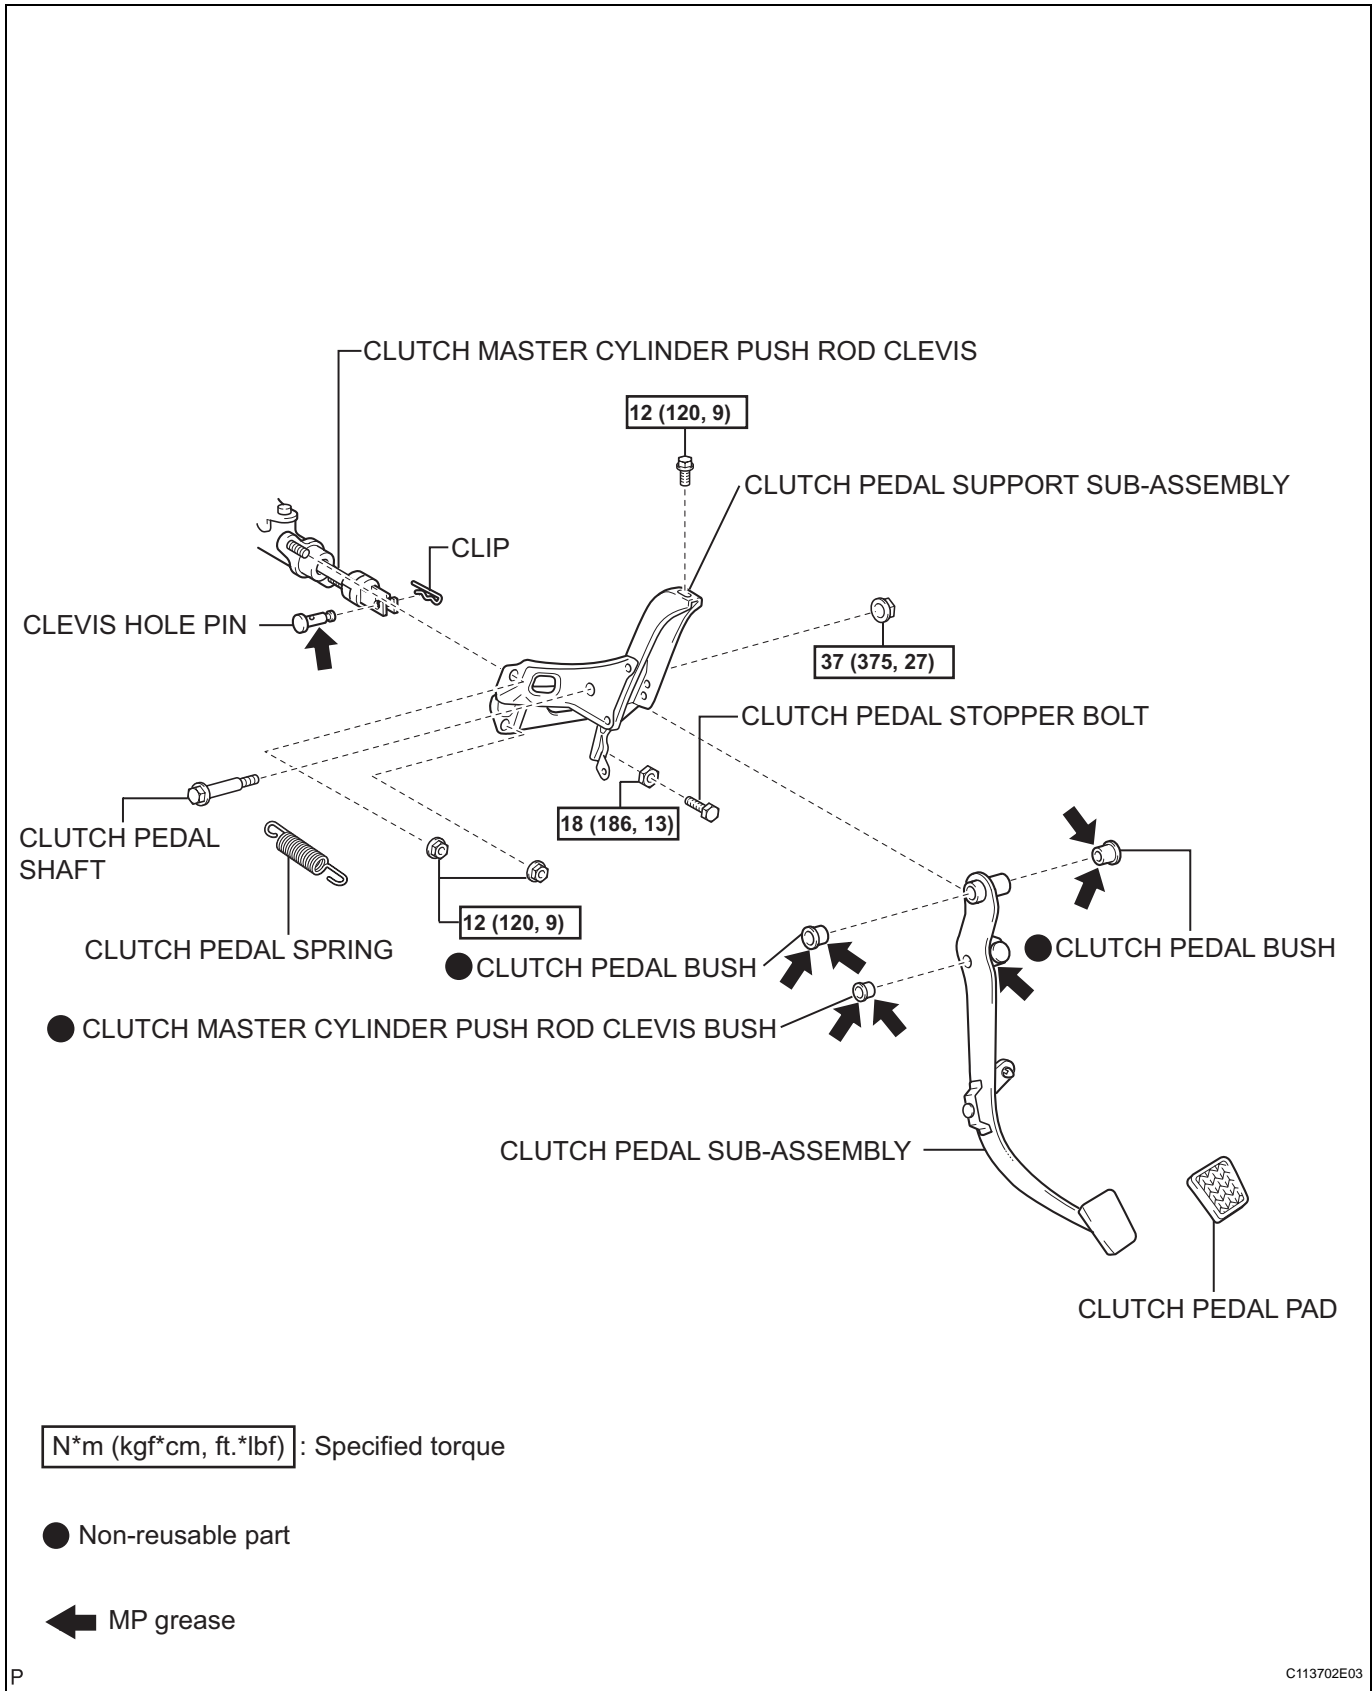


REMOVAL

1. REMOVE CLUTCH PEDAL SPRING
2. DISCONNECT CLUTCH MASTER CYLINDER PUSH ROD CLEVIS

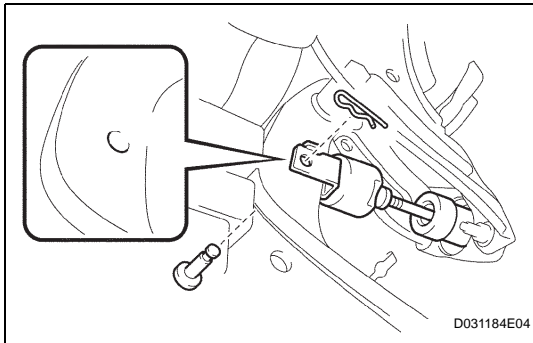


- (a) Remove the clip and hole pin and disconnect the push rod clevis from the clutch pedal.

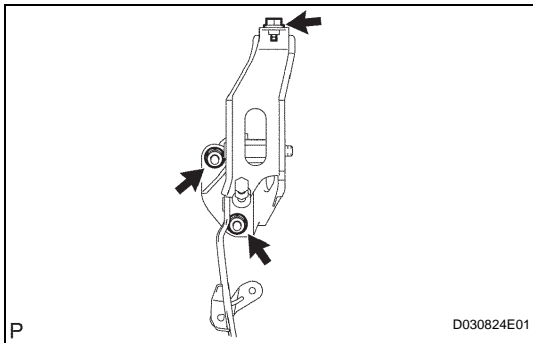


3. REMOVE CLUTCH PEDAL SUPPORT SUB-ASSEMBLY

- (a) Remove the 2 nuts, bolt and support.

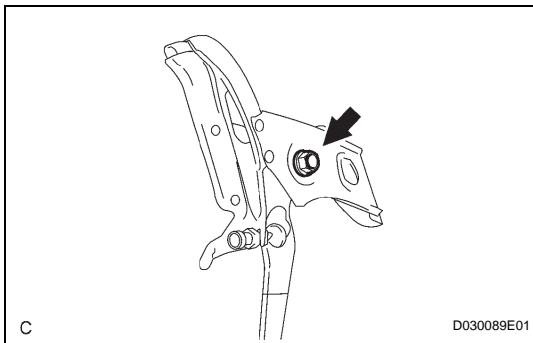**DISASSEMBLY**

1. REMOVE CLUTCH PEDAL SUB-ASSEMBLY


- (a) Remove the bolt and nut.
- (b) Remove the pedal from the clutch pedal support.

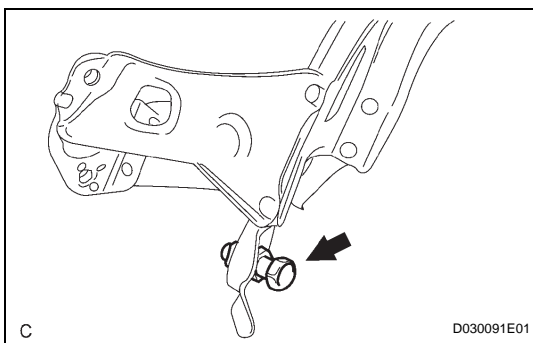


2. REMOVE CLUTCH PEDAL STOPPER BOLT

- (a) Loosen the lock nut and remove the bolt.
- (b) Remove the lock nut from the bolt.

3. REMOVE CLUTCH PEDAL PAD

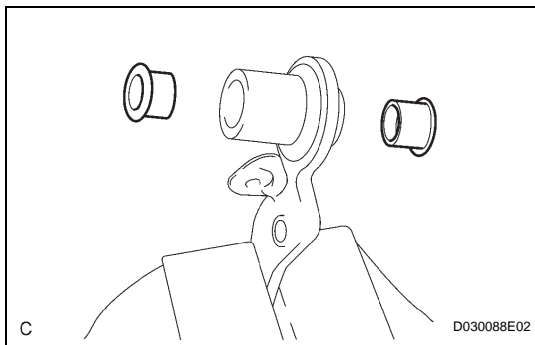**4. REMOVE CLUTCH PEDAL BUSH**

- (a) Remove the 2 bushes from the clutch pedal.

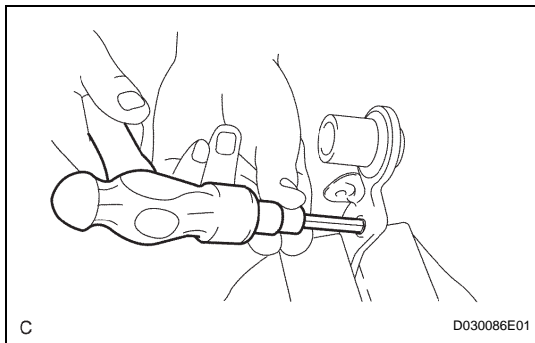**5. REMOVE CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH**

- (a) Using an 8 mm hexagon wrench and hammer, tap out the clevis bush from the clutch pedal.