

## INSTALLATION

1. **INSTALL CLUTCH START SWITCH ASSEMBLY**
  - (a) Install the clutch start switch to the bracket with the nut.  
**Torque: 6.2 N\*m (63 kgf\*cm, 55 in.\*lbf)**
  - (b) Install the clutch start switch with the 2 nuts.  
**Torque: 6.2 N\*m (63 kgf\*cm, 55 in.\*lbf)**
  - (c) Connect the clutch start switch connector.
2. **INSPECT CLUTCH START SWITCH ASSEMBLY (See page [CL-21](#))**