


POWER DOOR LOCK CONTROL SYSTEM

PARTS LOCATION

DL

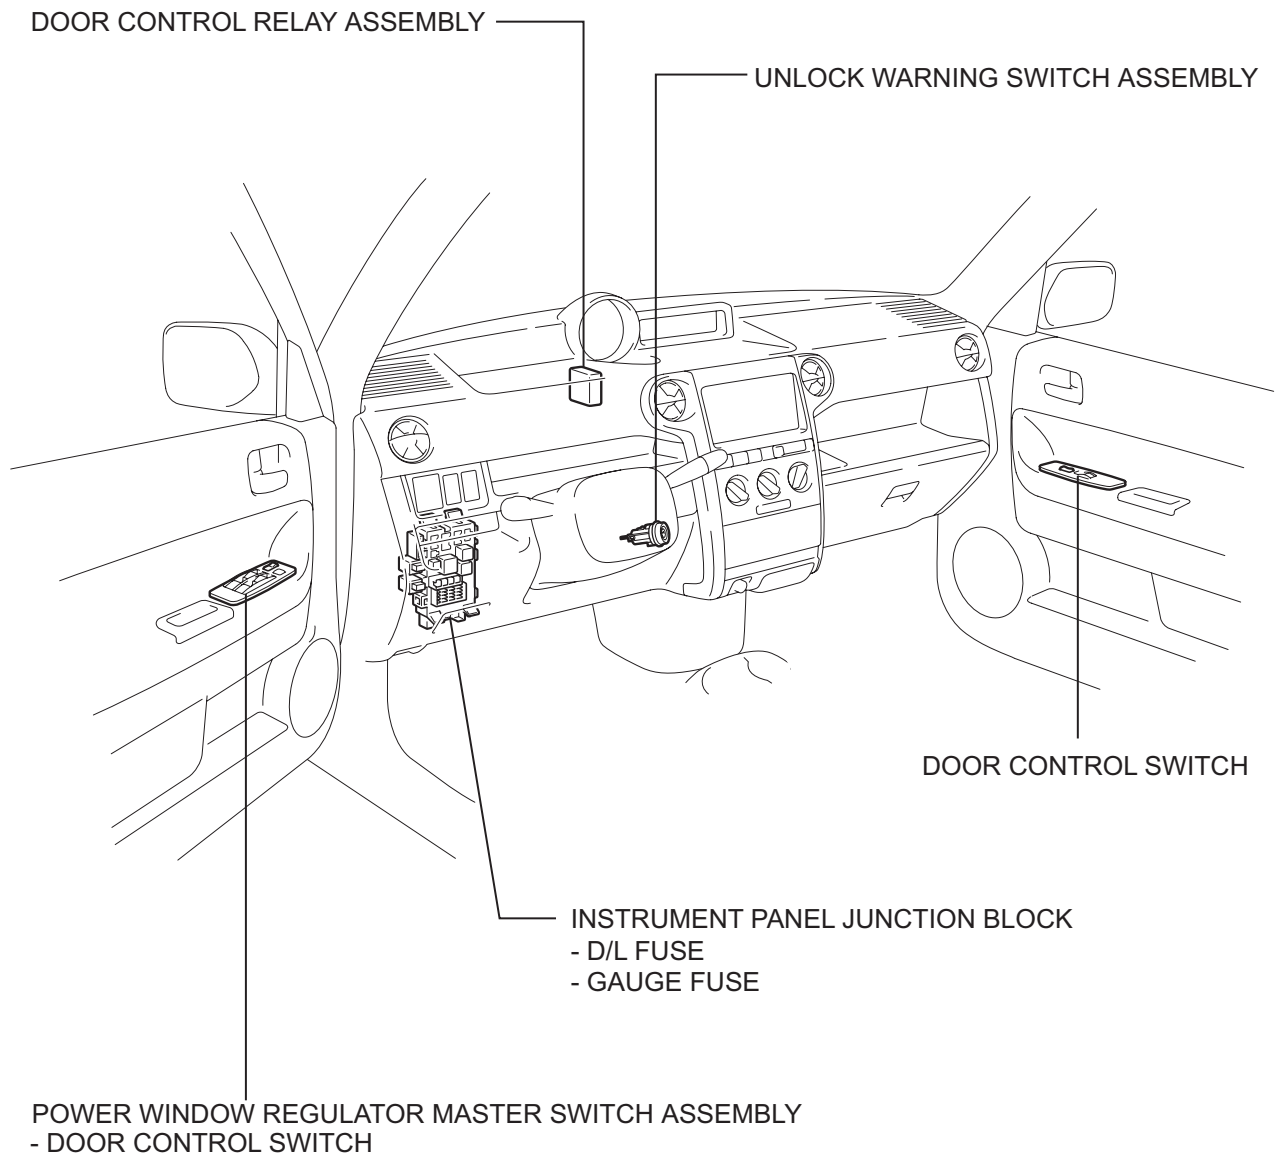


DL

FRONT DOOR LOCK ASSEMBLY LH
- FRONT DOOR LOCK ACTUATOR ASSEMBLY LH

REAR DOOR LOCK ASSEMBLY LH
- REAR DOOR LOCK ACTUATOR ASSEMBLY LH

FRONT DOOR LOCK ASSEMBLY RH
- FRONT DOOR LOCK ACTUATOR ASSEMBLY RH

REAR DOOR LOCK ASSEMBLY RH
- REAR DOOR LOCK ACTUATOR ASSEMBLY RH

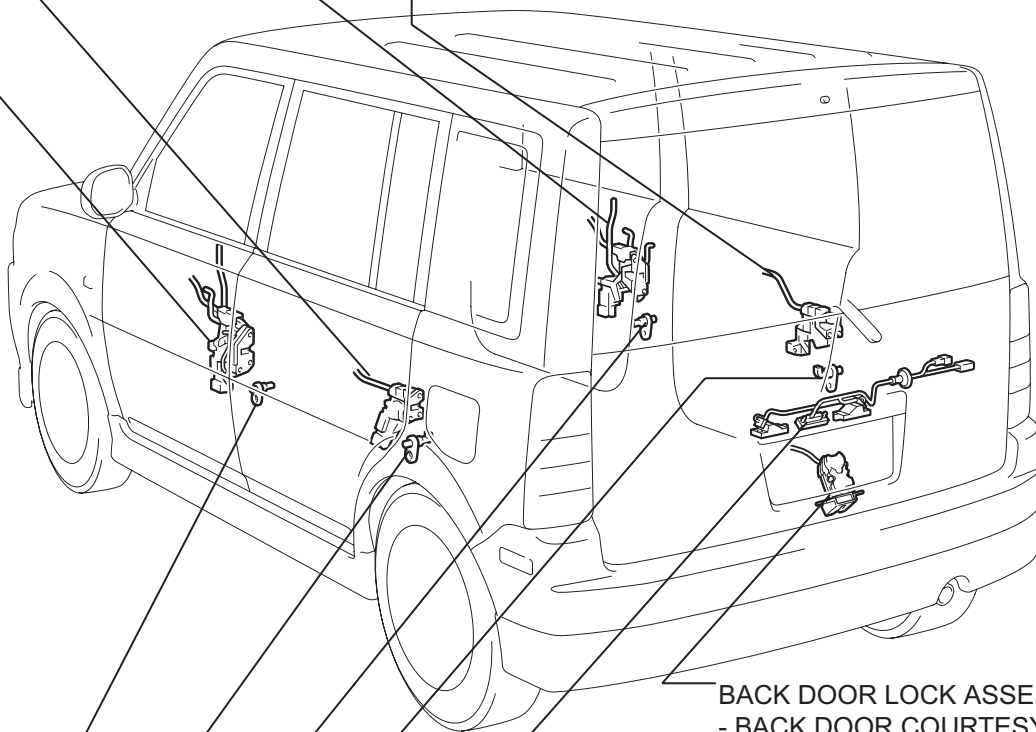

BACK DOOR LOCK ASSEMBLY
- BACK DOOR COURTESY SWITCH

BACK DOOR OPENER SWITCH ASSEMBLY
(OUTSIDE HANDLE SWITCH)

REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY RH

FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY RH

REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY LH

FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY LH