


No Answer-Back

DESCRIPTION

If there is no answer-back of the hazard warning light although the wireless door lock / unlock function is operating normally, there might be a malfunction in the hazard warning light signal that is output from the door control relay.

WIRING DIAGRAM

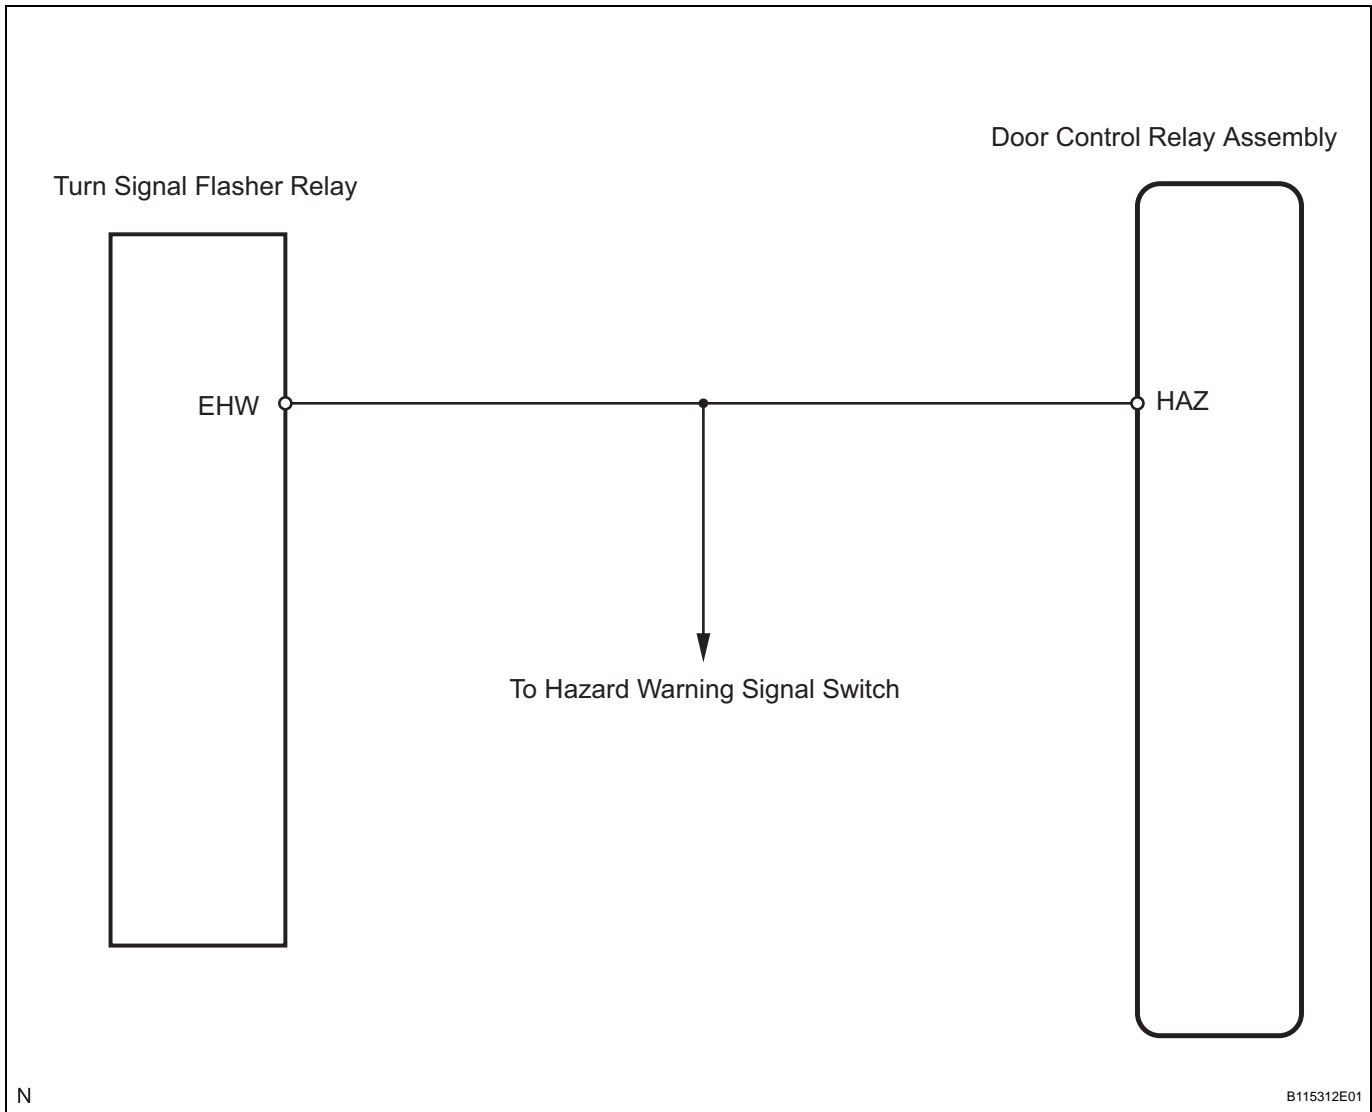

1

CHECK WIRELESS DOOR LOCK FUNCTIONS

- (a) Check whether the wireless door lock functions operate by operating the transmitter switch.

HINT:

When the wireless door LOCK / UNLOCK operation can be performed, it means that the wireless signal from the transmitter is properly input to the door control relay.

NG Go to **ONLY WIRELESS CONTROL FUNCTION DOES NOT OPERATE**

OK

2 CHECK HAZARD WARNING LIGHT


(a) Check that the hazard warning lights blink when the hazard warning signal switch is pressed.

NG Go to **LIGHTING SYSTEM**

OK

DL

3 CHECK WIRE HARNESS (TURN SIGNAL FLASHER RELAY - DOOR CONTROL RELAY)

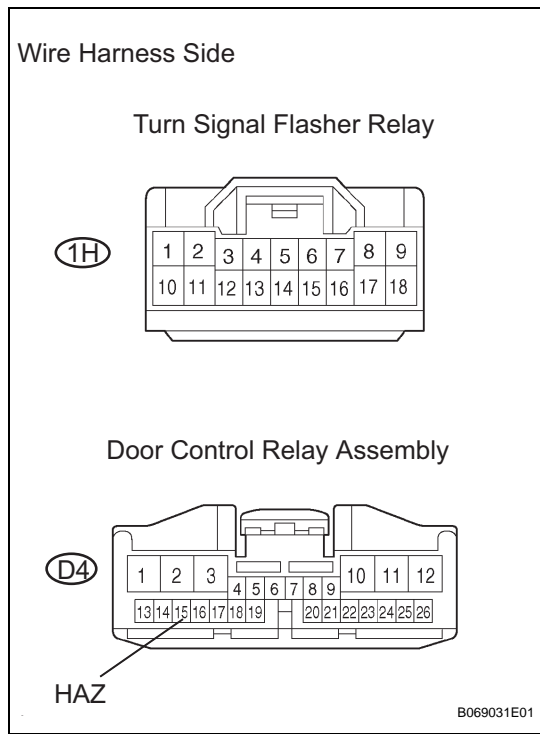

- (a) Disconnect the 1H junction block connector.
- (b) Disconnect the D4 relay connector.
- (c) Measure the resistance of the wire harness side connectors.


Standard resistance

Tester Connection	Specified Condition
1H-1 -D4-15 (HAZ)	Below 1 Ω

NG **REPAIR OR REPLACE HARNESS AND CONNECTOR**

OK

4 INSPECT INSTRUMENT PANEL JUNCTION BLOCK (TURN SIGNAL FLASHER RELAY)

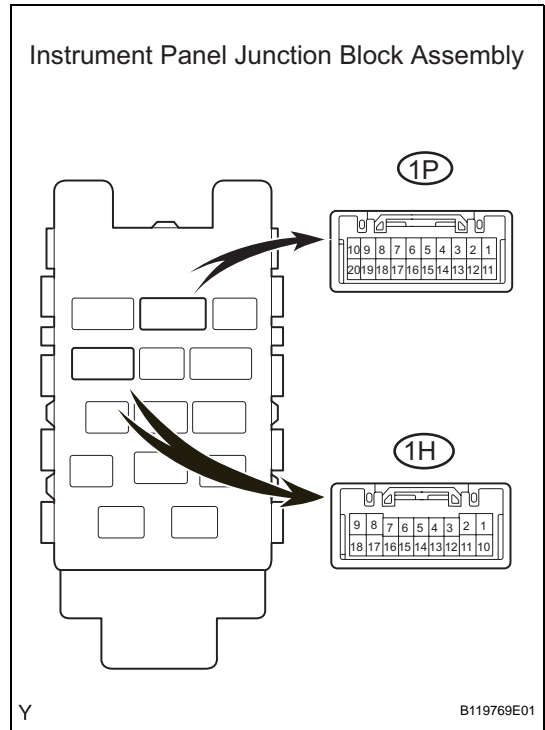

- (a) Disconnect the 1H and 1P junction block connectors.
- (b) Measure the resistance of the junction block terminals.

Standard resistance

Tester Connection	Specified Condition
1H-1 - 1P-9	Below 1 Ω

NG → **REPLACE INSTRUMENT PANEL JUNCTION BLOCK**

OK

REPLACE DOOR CONTROL RELAY ASSEMBLY

DL