

TRANSMITTER BATTERY

REPLACEMENT

1. REMOVE TRANSMITTER BATTERY

NOTICE:

Take extra care when handling these precision electronic components.



- (a) Using a screwdriver, pry out the transmitter case.

HINT:

Tape the screwdriver tip before use.

NOTICE:


Do not forcibly pry out the case.

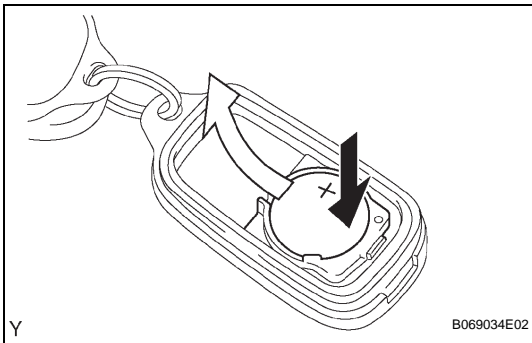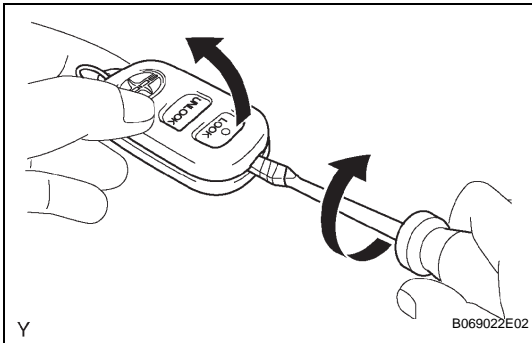

- (b) Remove the battery (lithium battery).

NOTICE:

- Do not push the terminals with your finger.
- Do not forcibly pry up the battery (lithium battery). The terminals may become damaged.
- Do not touch the battery with wet hands. Water may cause rust.
- Do not touch or move any components inside the transmitter.

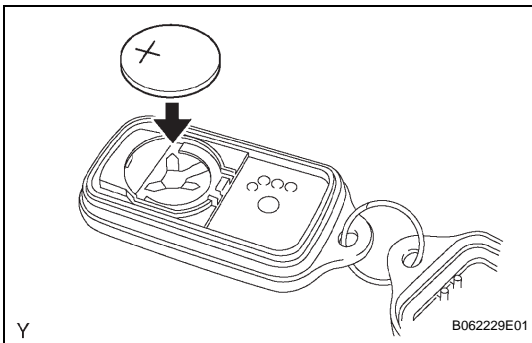

2. INSTALL TRANSMITTER BATTERY

- (a) Install a new battery (lithium battery) with the positive (+) side up, as shown in the illustration.

NOTICE:

- Be sure that the positive (+) and negative (-) sides of the transmitter battery are correctly matched up to the transmitter terminals.
- Be careful not to bend the transmitter battery electrode during insertion.
- Keep the transmitter case interior free of dust and oil.

- (b) Install the case securely.