

REAR DOOR LOCK

INSPECTION


1. INSPECT REAR DOOR LOCK ACTUATOR ASSEMBLY LH

- (a) Apply battery voltage to the actuator terminals and check operation of the door lock motor.

OK

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 2 Battery negative (-) → Terminal 1	Lock
Battery positive (+) → Terminal 1 Battery negative (-) → Terminal 2	Unlock

If the result is not as specified, replace the actuator.

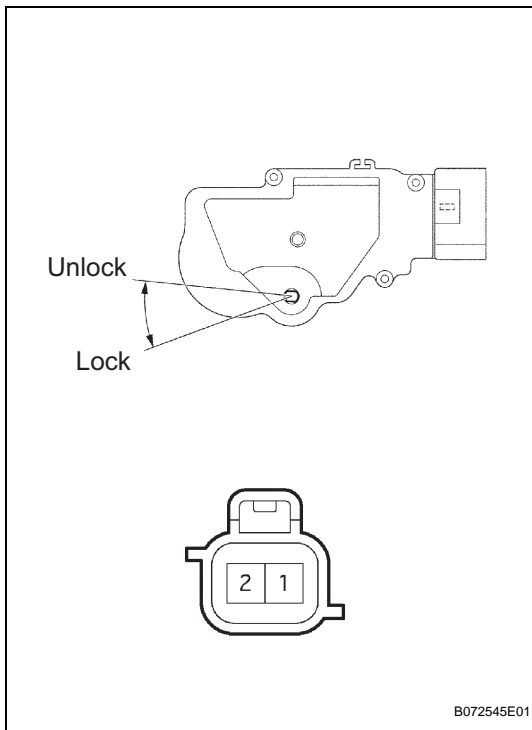

2. INSPECT REAR DOOR LOCK ACTUATOR ASSEMBLY RH

- (a) Apply battery voltage to the actuator terminals and check operation of the door lock motor.

OK

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 2 Battery negative (-) → Terminal 1	Lock
Battery positive (+) → Terminal 1 Battery negative (-) → Terminal 2	Unlock

If the result is not as specified, replace the actuator.

