


ON-VEHICLE INSPECTION

1. INSPECT BACK DOOR PANEL SUB-ASSEMBLY
- (a) Check that the clearance measurements of areas A to F are within the standard range.

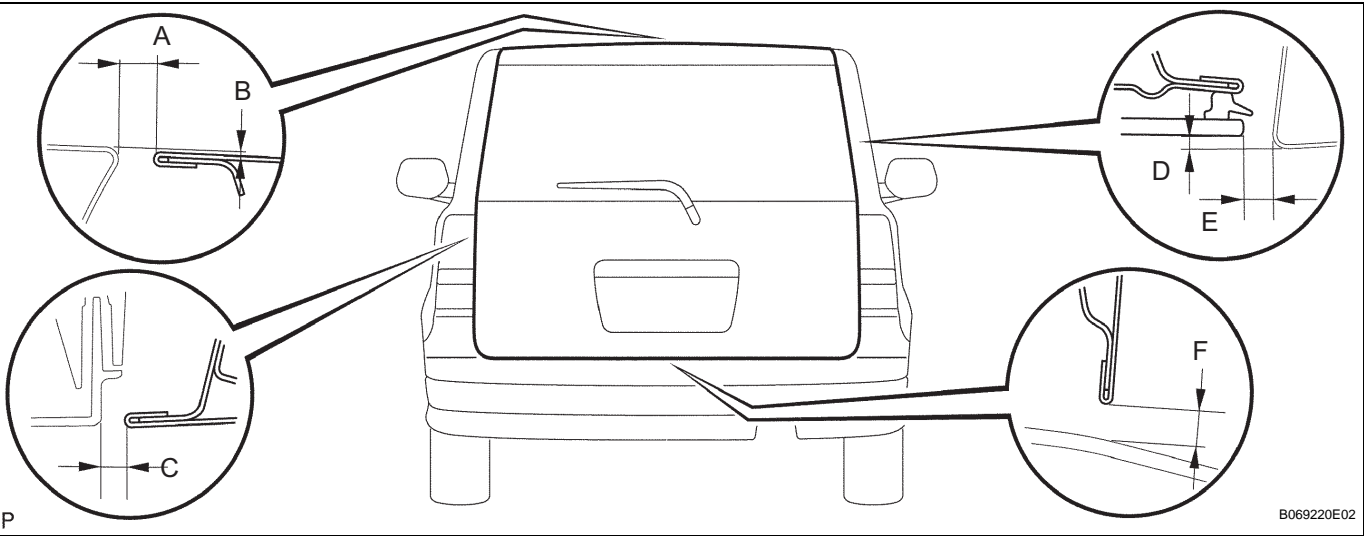

Standard measurement

Area	Specified Condition
A	7.5 +- 1.5 mm (0.300 +- 0.059 in.)
B	1.0 +- 1.5 mm (0.040 +- 0.059 in.)
C	5.5 +- 1.5 mm (0.228 +- 0.059 in.)
D	2.7 +- 1.5 mm (0.106 +- 0.059 in.)
E	6.0 +- 1.5 mm (0.236 +- 0.059 in.)
F	7.2 +- 1.5 mm (0.283 +- 0.059 in.)

DISASSEMBLY

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. **REMOVE BACK DOOR TRIM BOARD**

(a) Using a clip remover, remove the 11 clips and trim board.

3. **REMOVE BACK DOOR GARNISH OUTSIDE (See page ET-24)**

4. **REMOVE CENTER STOP LIGHT ASSEMBLY (See page LI-20)**

5. **REMOVE REAR WIPER MOTOR ASSEMBLY (See page WW-16)**

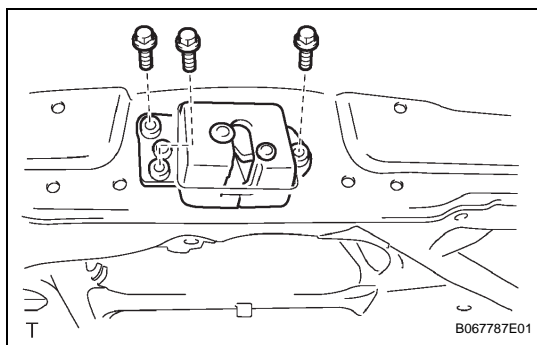

6. **REMOVE BACK DOOR LOCK ASSEMBLY**

(a) Disconnect the door lock connector.
(b) Remove the 3 bolts and door lock.

HINT:

Remove the door lock through the service hole.

7. **REMOVE BACK WINDOW GLASS CHANNEL LH**

(a) Using a clip remover, remove the 2 clips.
(b) Using a heat light, heat the channel.

Standard heating temperature:

20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and channel excessively.

(c) Using a screwdriver, remove the channel.

HINT:

Tape the screwdriver tip before use.

8. **REMOVE BACK WINDOW GLASS CHANNEL RH**

(a) Use the same procedures described for the LH side.

9. **REMOVE DOOR PULL HANDLE**

(a) Using a screwdriver, detach the 4 claws and remove the pull handle.

HINT:

Tape the screwdriver tip before use.

10. **REMOVE BACK DOOR STAY SUB-ASSEMBLY LH (See page ED-42)**

11. **REMOVE BACK DOOR STAY SUB-ASSEMBLY RH**

(a) Use the same procedures described for the LH side.

12. **REMOVE BACK DOOR STOPPER LOWER**

(a) Remove the bolt and stopper LH and RH.

