



FRONT BUMPER COMPONENTS

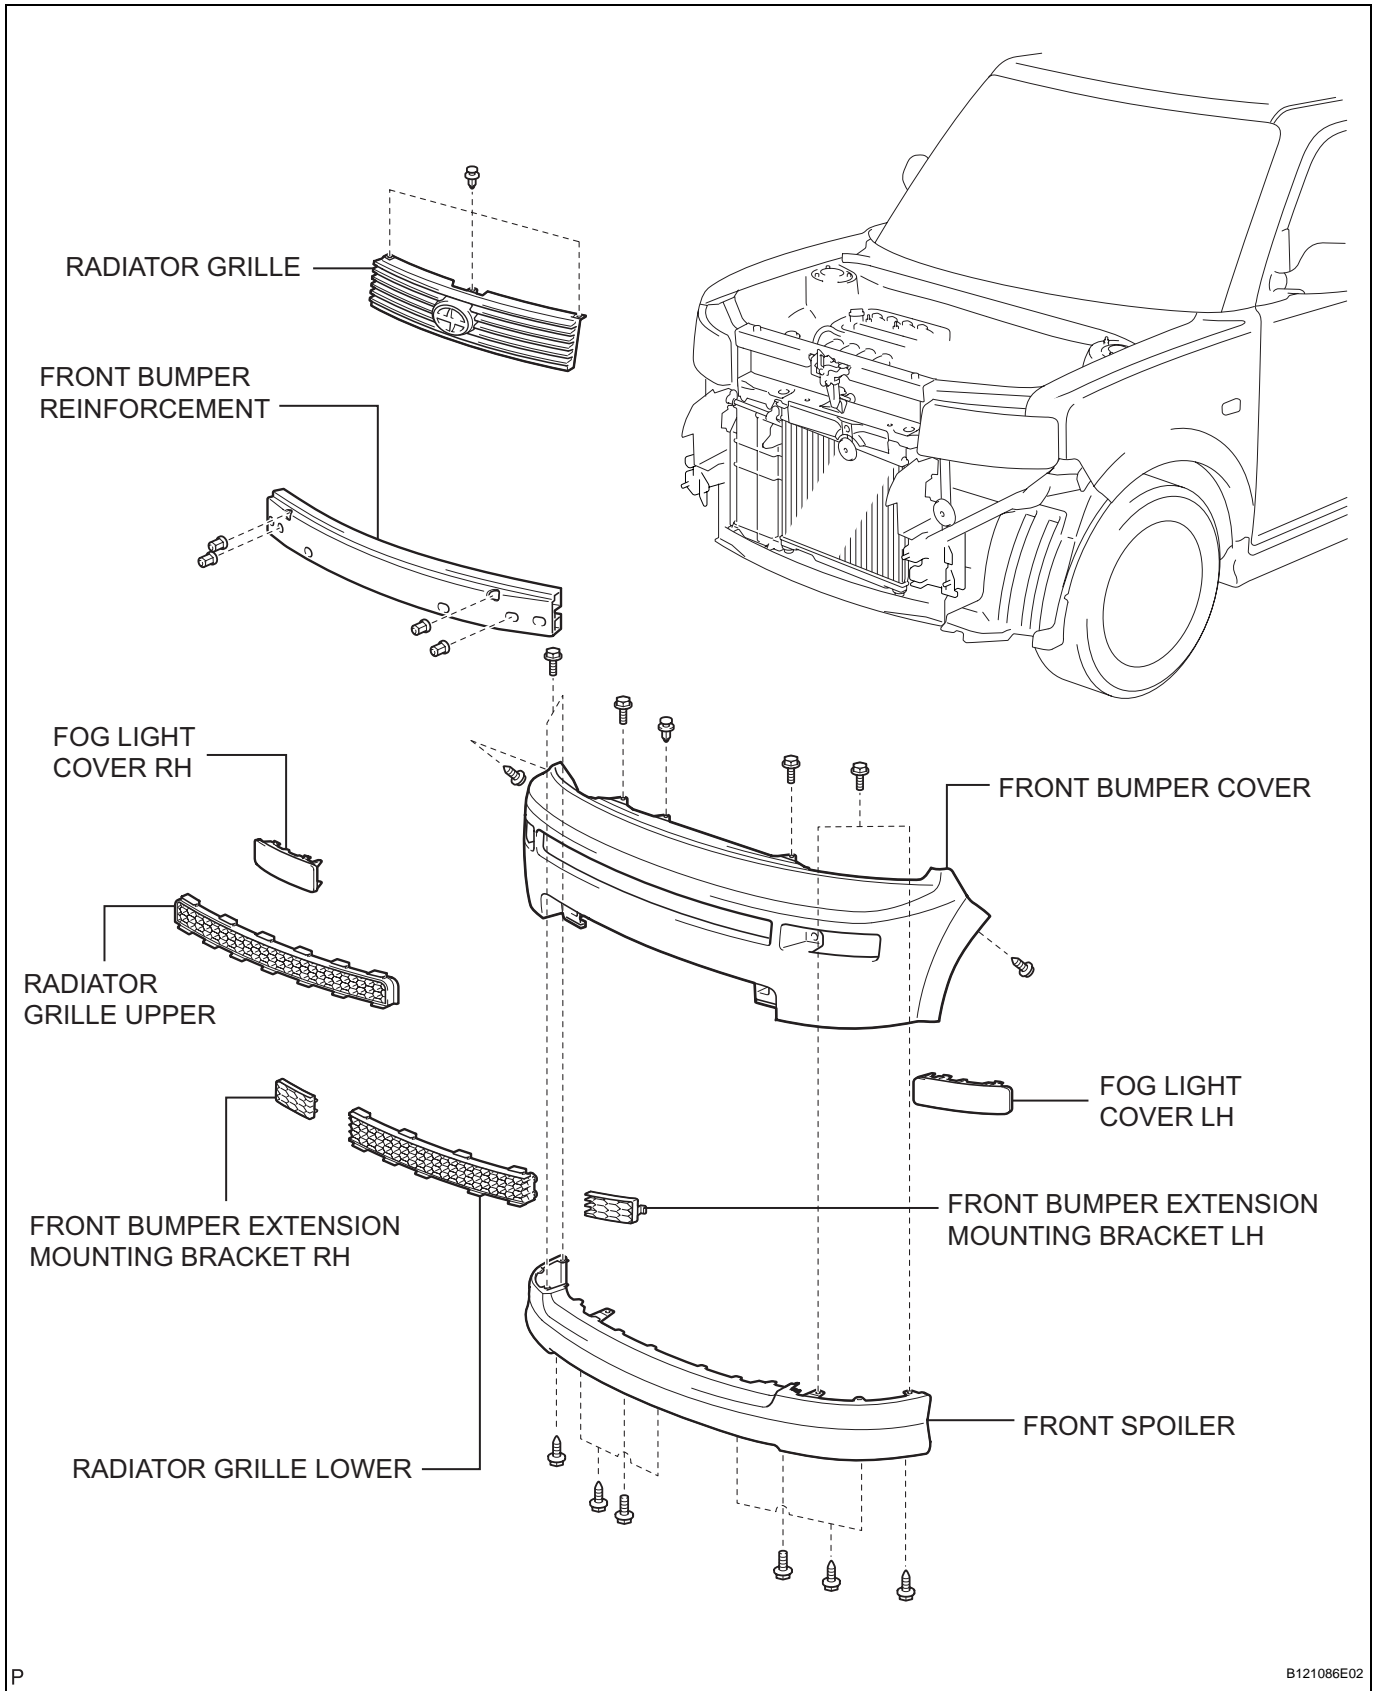

ET

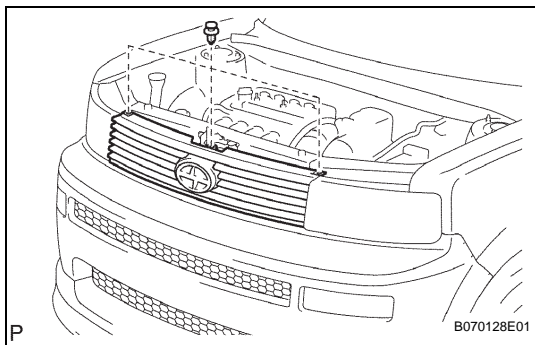

REMOVAL

1. REMOVE RADIATOR GRILLE

- (a) Using a clip remover, remove the 3 clips and radiator grille.

2. REMOVE FRONT FENDER LINER LH

- (a) Remove the 2 screws.
- (b) Partially remove the fender liner.

HINT:

It is not necessary to fully remove the fender liner. Partially remove it so that the bumper cover can be removed in a later step.

3. REMOVE FRONT FENDER LINER RH

HINT:

Use the same procedures for the RH side and LH side.

4. REMOVE FRONT BUMPER COVER

- (a) Put protective tape under the front fender.
- (b) Remove the clip and 2 bolts from the upper side of the bumper cover.
- (c) Using a screwdriver, detach the 2 claws and remove the 2 bolts, 6 screws and bumper cover.

HINT:

Tape the screwdriver tip before use.

5. REMOVE FRONT BUMPER REINFORCEMENT

- (a) Remove the 4 nuts and reinforcement.

