

DISASSEMBLY

1. **REMOVE REAR BUMPER PROTECTOR LH**
 - (a) Using a clip remover, remove the 3 clips and bumper protector.
2. **REMOVE REAR BUMPER PROTECTOR RH**
 - (a) Using a clip remover, remove the 3 clips and bumper protector.
3. **REMOVE REAR BUMPER PIECE LH**
 - (a) Using a clip remover, remove the 5 clips.
 - (b) Using a screwdriver, detach the 8 claws and remove the bumper piece LH (with bumper piece RH).
HINT:
Tape the screwdriver tip before use.
4. **REMOVE REAR BUMPER PIECE RH**
 - (a) Using a clip remover, remove the clip.
 - (b) Using a screwdriver, detach the claws and remove the bumper piece LH from the bumper piece RH.
HINT:
Tape the screwdriver tip before use.
5. **REMOVE REAR BUMPER EXTENSION RH**
 - (a) Using a screwdriver, detach the 2 claws and remove the extension.
HINT:
Tape the screwdriver tip before use.
6. **REMOVE REAR SIDE MARKER LIGHT ASSEMBLY LH**
 - (a) Remove the nut and marker light.
7. **REMOVE REAR SIDE MARKER LIGHT ASSEMBLY RH**
 - (a) Remove the nut and marker light.

REASSEMBLY

1. **INSTALL REAR SIDE MARKER LIGHT ASSEMBLY LH**
 - (a) Install the marker light with the nut.
2. **INSTALL REAR SIDE MARKER LIGHT ASSEMBLY RH**
 - (a) Install the marker light with the nut.
3. **INSTALL REAR BUMPER EXTENSION RH**
 - (a) Attach the 2 claws to install the extension.
4. **INSTALL REAR BUMPER PIECE RH**
 - (a) Attach the claw and install the bumper piece LH to the bumper piece RH with the clip.
5. **INSTALL REAR BUMPER PIECE LH**
 - (a) Attach the 8 claws and install the bumper piece LH (with bumper piece RH) with the 5 clips.
6. **INSTALL REAR BUMPER PROTECTOR LH**
 - (a) Install the bumper protector with the 3 clips.
7. **INSTALL REAR BUMPER PROTECTOR RH**
 - (a) Install the bumper protector with the 3 clips.