


HORN RELAY

ON-VEHICLE INSPECTION

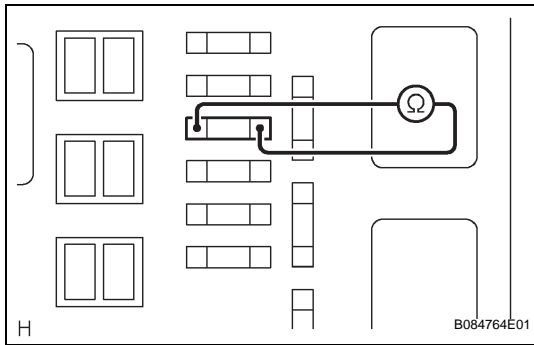

1. INSPECT FUSE (HORN)

(a) Measure the resistance of the fuse.

Standard resistance:

Below 1 Ω

If the result is not as specified, replace the fuse.

2. REMOVE HORN RELAY (Marking: HORN)


(a) Remove the engine room relay block cover.

(b) Remove the horn relay from the engine room relay block.

3. INSPECT HORN RELAY

(a) Measure the resistance of the horn relay.

Standard resistance

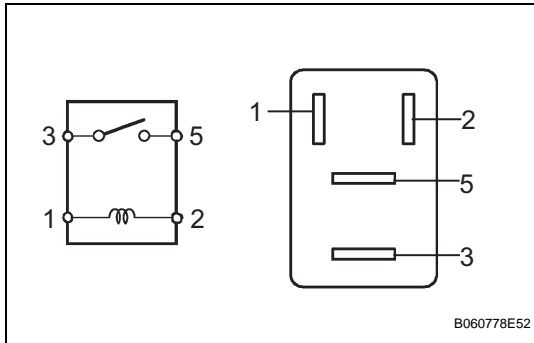

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

4. INSTALL HORN RELAY