



LOW PITCHED HORN

COMPONENTS

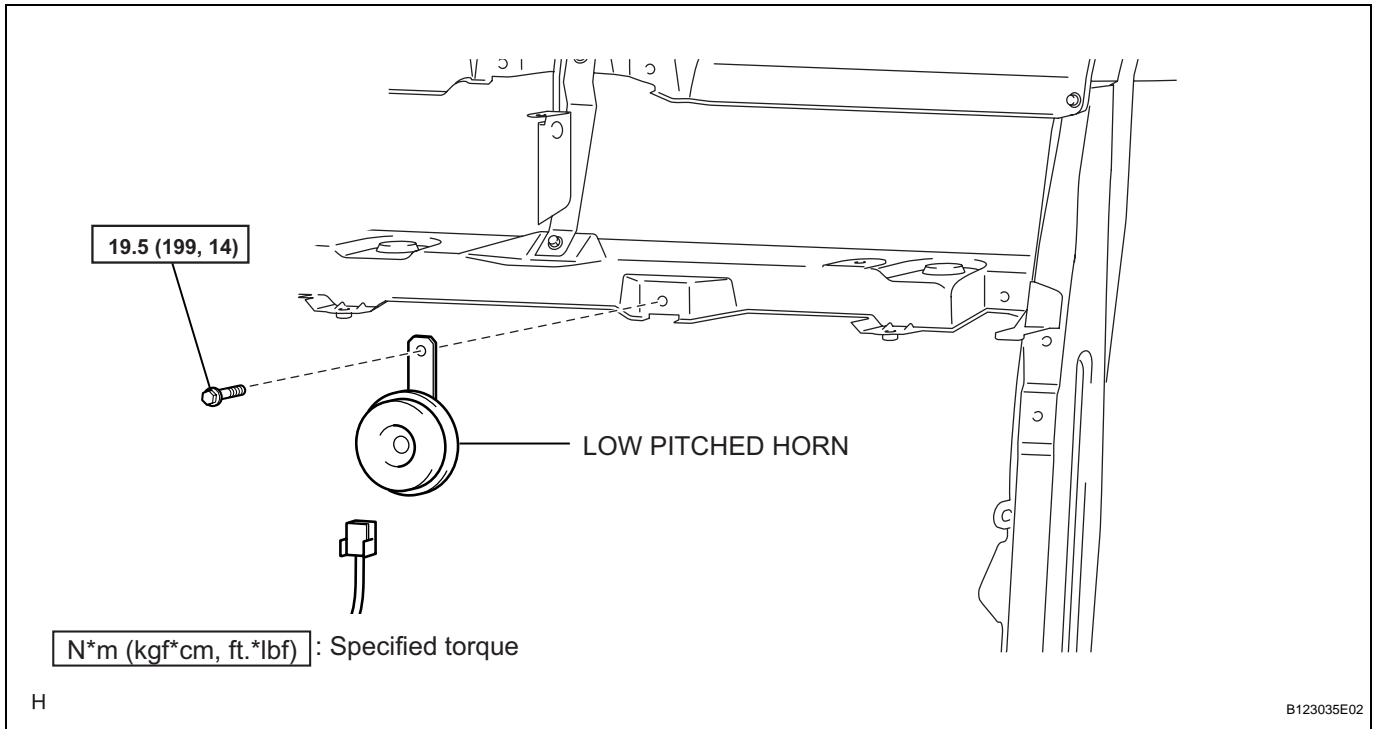


HO

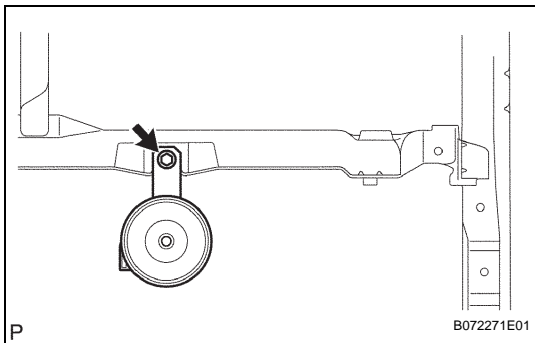

REMOVAL

1. REMOVE LOW PITCHED HORN
 - (a) Disconnect the horn connector.
 - (b) Remove the bolt and horn.

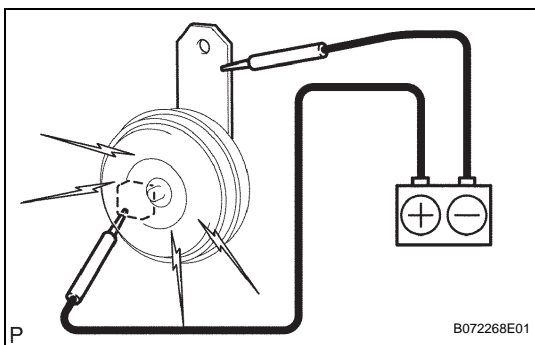


INSPECTION

1. INSPECT LOW PITCHED HORN
 - (a) Apply battery voltage to the horn and check the operation of the horn.

OK

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 1	Horn sounds
Battery negative (-) → Horn bracket	

If the result is not as specified, replace the horn.

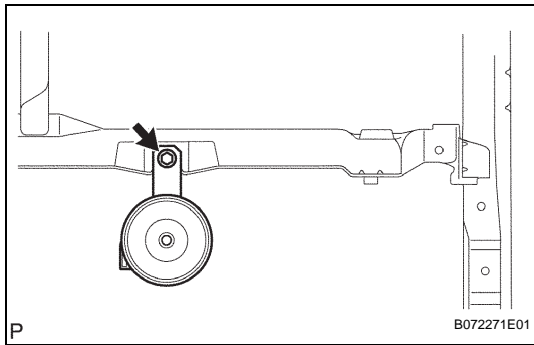

INSTALLATION

1. INSTALL LOW PITCHED HORN

- (a) Attach the horn stay to the body panel and then install the horn with the bolt.

Torque: 19.5 N*m (199 kgf*cm, 14 ft.*lbf)

- (b) Connect the horn connector.