


SYSTEM DIAGRAM

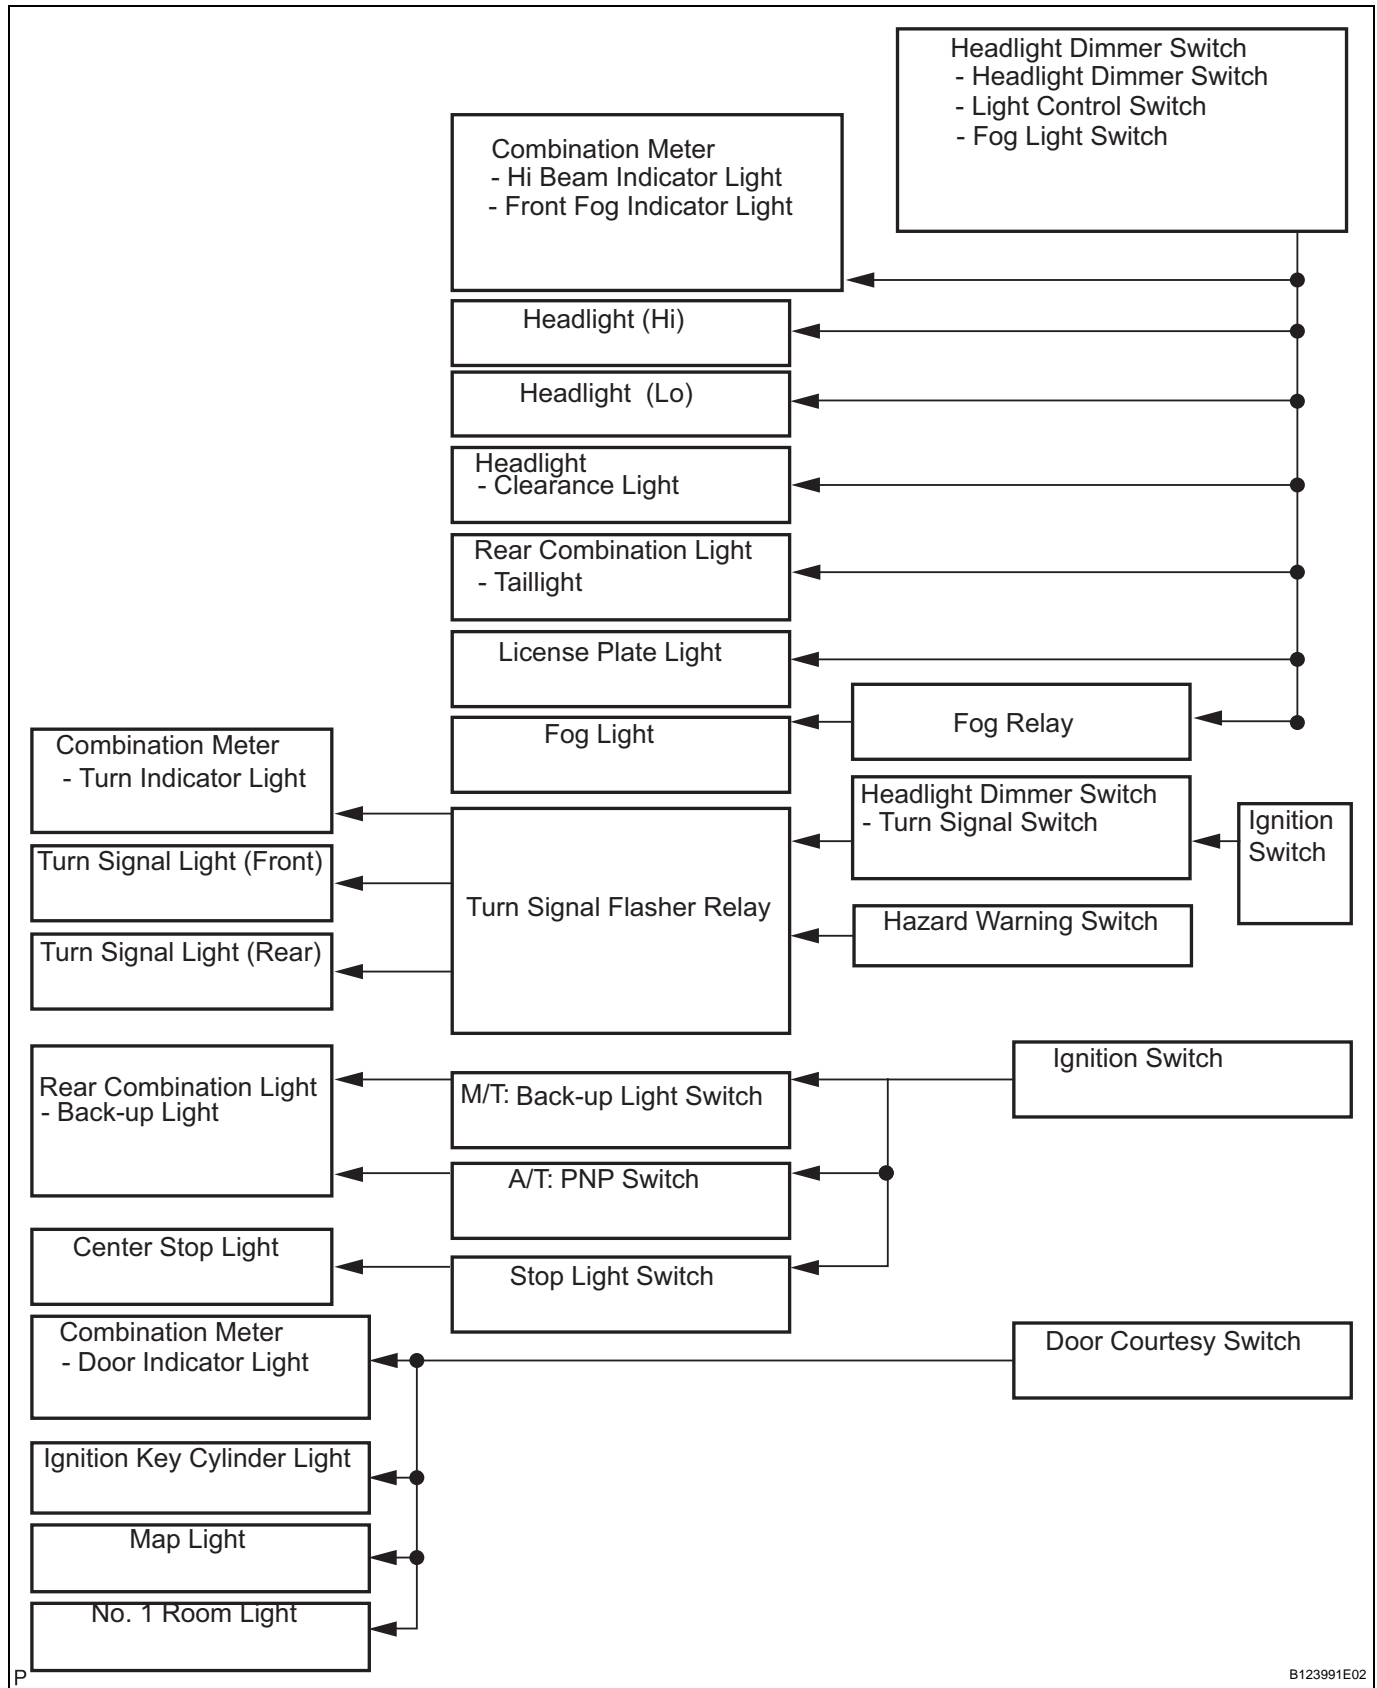

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Headlight and taillight

Symptom	Suspected area	See page
LO - Beam does not come on (One side).	1. Bulb	-
	2. H-LP LH/H-LP LO RH fuse	-
	3. Wire harness	-
LO - Beam does not come on (All).	1. Headlight dimmer switch assembly	LI-24
	2. Wire harness	-
HI - Beam does not come on (One side).	1. Bulb	-
	2. H-LP LH/H-LP LO RH fuse	-
	3. Wire harness	-
HI - Beam does not come on (All).	1. Headlight dimmer switch assembly	LI-24
	2. Wire harness	-
Flash does not operate (All).	1. Headlight dimmer switch assembly	LI-24
	2. Wire harness	-
Headlight is dark.	1. Bulb	-
	2. Wire harness	-
Only one taillight comes on.	1. Bulb	-
	2. Wire harness	-
Both taillights do not come on (Headlights are normal).	1. TAIL fuse	-
	2. Headlight dimmer switch assembly	LI-24
	3. Wire harness	-
Both taillights do not come on (Headlights do not come on).	1. Headlight dimmer switch assembly	LI-24
	2. Wire harness	-

Turn signal and hazard warning light system

Symptom	Suspected area	See page
Hazard warning light and Turn signal do not come on.	1. HAZ fuse	-
	2. Turn signal flasher relay	LI-32
	3. Wire harness	-
Hazard warning light does not come on (Hazard is normal).	1. Hazard warning switch	LI-26
	2. Turn signal flasher relay	LI-32
	3. Wire harness	-
Turn signal does not come on (Hazard is normal).	1. Turn signal switch	LI-24
	2. Turn signal flasher relay	LI-32
	3. Wire harness	-
Turn signal does not come on in one direction.	1. Turn signal switch	LI-24
	2. Turn signal flasher relay	LI-32
	3. Wire harness	-
Only one bulb comes on.	1. Bulb	-
	2. Wire harness	-

Stop light system

Symptom	Suspected area	See page
Both stop lights do not come on.	1. STOP fuse	-
	2. Stop light switch assembly	LI-27
	3. Wire harness	-
Stop light always remains on.	1. Stop light switch assembly	LI-27
	2. Wire harness	-
Stop light does not come on (One side).	1. Bulb	-
	2. Wire harness	-

Back light system

Symptom	Suspected area	See page
Both back-up lights do not come on.	1. GAUGE fuse	-
	2. Back-up light switch assembly (M/T)	LI-28
	3. Park/neutral position switch assembly (A/T)	AX-88
	4. Wire harness	-
Both back-up lights remain always ON.	1. Back-up light switch assembly (M/T)	LI-28
	2. Park/neutral position switch assembly (A/T)	AX-88
	3. Wire harness	-
Back-up light does not come on (One side).	1. Bulb	-
	2. Wire harness	-

Interior light system

Symptom	Suspected area	See page
Interior light does not come on.	1. DOME fuse	-
	2. Wire harness	-
No. 1 room light does not come on	1. Bulb	-
	2. No. 1 room light assembly	LI-23
	3. Wire harness	-