

## ON-VEHICLE INSPECTION

### 1. CHECK ILLUMINATED ENTRY SYSTEM OPERATION

#### HINT:

The light that comes on upon entry is the No. 1 room light assembly.

- (a) Turn the ignition switch OFF, close all the doors, and lock the driver's door.
- (b) Unlock the driver's door, open one of the doors, and check that the No. 1 room light assembly comes on. Then, close the door and check that the No. 1 room light assembly goes off after approximately 15 seconds.
- (c) Turn the ignition switch to the ON position, and open and close one of the doors. Check that the No. 1 room light assembly goes off immediately.
- (d) Turn the ignition switch OFF.
- (e) Open and close one of the doors to turn on the No. 1 room light assembly. Before the No. 1 room light assembly goes off, after approximately 15 seconds, turn the ignition switch to the ON position, and check that the No. 1 room light assembly goes off immediately.
- (f) Turn the ignition switch OFF.
- (g) Open and close one of the doors to turn on the No. 1 room light assembly. Before the No. 1 room light assembly goes off, after approximately 15 seconds, lock the driver's door, and check that the No. 1 room light assembly goes off immediately.