

# SIDE TURN SIGNAL LIGHT ASSEMBLY

## REMOVAL

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.


### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

### 2. REMOVE SIDE TURN SIGNAL LIGHT ASSEMBLY LH

- (a) Pull the side turn signal light LH as shown in the illustration and detach the 2 claws.
- (b) Disconnect the connector and remove the light.

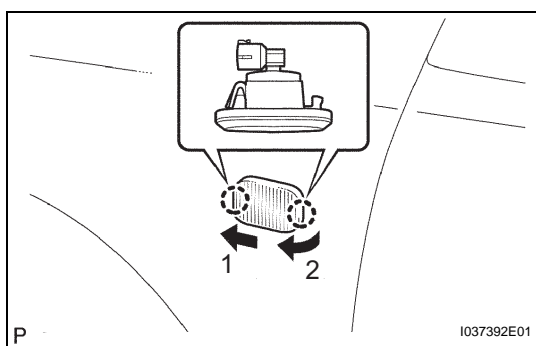

## DISASSEMBLY

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

### 1. REMOVE SIDE TURN SIGNAL LIGHT BULB

- (a) Remove the light socket as shown in the illustration.
- (b) Remove the light bulb from the light socket.

