

REASSEMBLY

HINT:

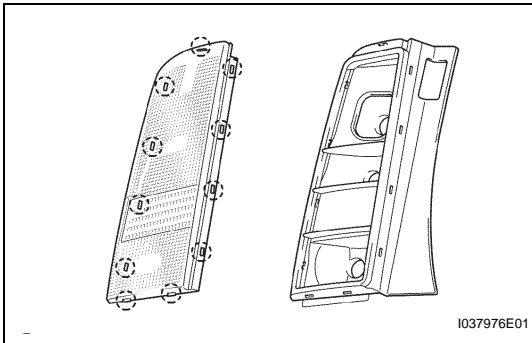
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL REAR COMBINATION LIGHT LENS GASKET LH

- (a) Install a new rear combination light lens gasket on the rear combination light lens.

NOTICE:

Be sure to replace the rear combination lens gasket with a new one because it cannot be reused.

LI

2. INSTALL REAR COMBINATION LIGHT LENS LH

- (a) Attach the 11 claws to install the rear combination light lens.

NOTICE:

Make sure that water cannot go inside the rear combination light by applying water with automatic car wash or a hose.

3. INSTALL REAR COMBINATION LIGHT BULB

- (a) Install the 3 light bulbs to the light sockets.
(b) Install the 3 light sockets.

4. INSTALL REAR COMBINATION LIGHT BODY GASKET LH

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL REAR COMBINATION LIGHT ASSEMBLY LH

- (a) Install the rear combination light with the 2 nuts.
- (b) Connect the connector.

2. INSTALL REAR COMBINATION LIGHT SERVICE COVER LH

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

