

# REAR COMBINATION LIGHT ASSEMBLY

## REMOVAL

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


#### CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

### 2. REMOVE REAR COMBINATION LIGHT SERVICE COVER LH

### 3. REMOVE REAR COMBINATION LIGHT ASSEMBLY LH

- (a) Disconnect the connector.
- (b) Remove the 2 nuts and rear combination light.

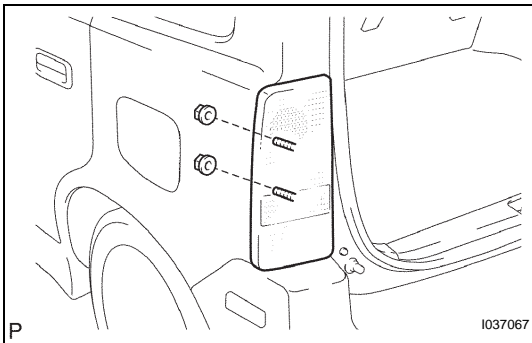

## DISASSEMBLY


### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

#### 1. REMOVE REAR COMBINATION LIGHT BODY GASKET LH

#### 2. REMOVE REAR COMBINATION LIGHT BULB

- (a) Remove the 3 light sockets as shown in the illustration.
- (b) Remove the 3 light bulbs from the light sockets.

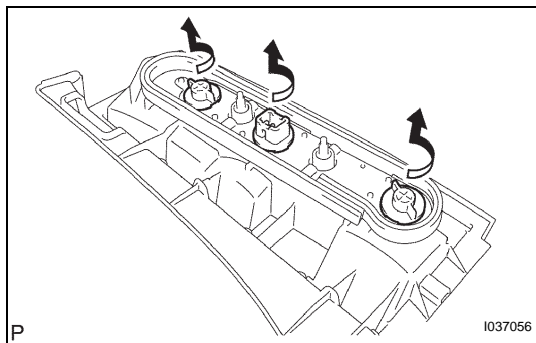

#### 3. REMOVE REAR COMBINATION LIGHT LENS LH

- (a) Using a screwdriver, detach the 11 claws and remove the rear combination light lens.

#### 4. REMOVE REAR COMBINATION LIGHT LENS GASKET LH

