
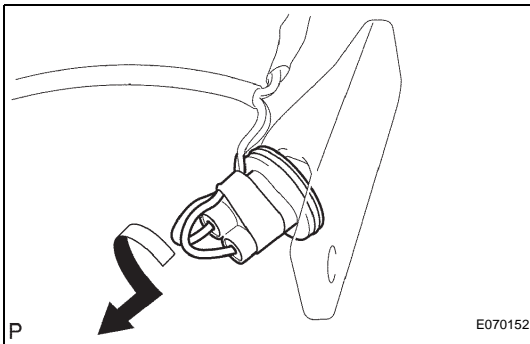


# LICENSE PLATE LIGHT ASSEMBLY

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**  
**CAUTION:**  
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
2. **REMOVE BACK DOOR TRIM BOARD** (See page [ED-38](#))
3. **REMOVE BACK DOOR GARNISH OUTSIDE** (See page [ET-24](#))
4. **REMOVE LICENSE PLATE LIGHT ASSEMBLY**
  - (a) Remove the 4 screws and light as shown in the illustration.

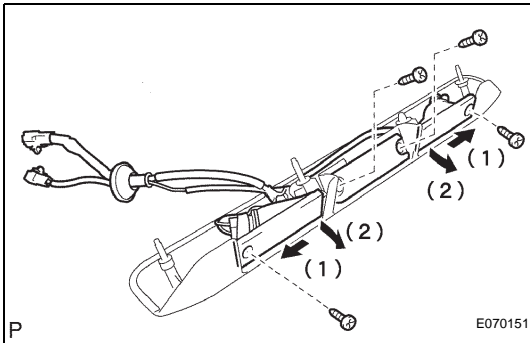

## DISASSEMBLY

1. **REMOVE LICENSE PLATE LIGHT BULB**
  - (a) Remove the license plate light socket as shown in the illustration.
  - (b) Remove the light bulb from the socket.

## REASSEMBLY

### 1. INSTALL LICENSE PLATE LIGHT BULB

- (a) Install the light bulb to the light socket.
- (b) Install the light socket to the rear light.

## INSTALLATION

### 1. INSTALL LICENSE PLATE LIGHT ASSEMBLY

- (a) Install the rear light with the 4 screws.

### 2. INSTALL BACK DOOR GARNISH OUTSIDE (See page [ET-24](#))

### 3. INSTALL BACK DOOR TRIM BOARD (See page [ED-41](#))

### 4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

