


REAR SIDE MARKER LIGHT ASSEMBLY

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.


1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE REAR BUMPER SIDE SEAL LH (See page [ET-6](#))**
3. **REMOVE REAR BUMPER SIDE SEAL RH (See page [ET-6](#))**
4. **REMOVE REAR BUMPER COVER (See page [ET-7](#))**
5. **REMOVE REAR SIDE MARKER LIGHT ASSEMBLY LH**
 - (a) Disconnect the connector.
 - (b) Remove the nut and rear side marker light.

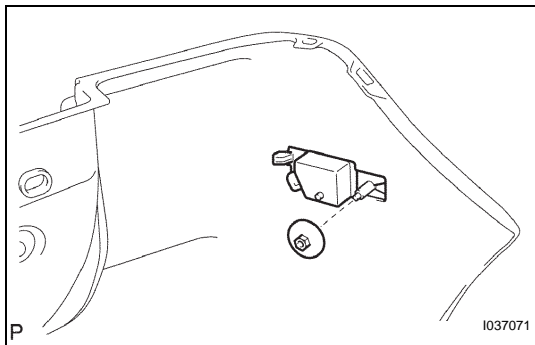

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

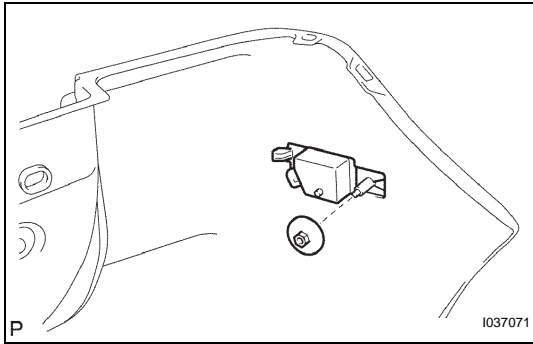

1. **INSTALL REAR SIDE MARKER LIGHT ASSEMBLY LH**
 - (a) Install the rear side marker light with the nut.
 - (b) Connect the connector.
2. **INSTALL REAR BUMPER COVER (See page [ET-9](#))**
3. **INSTALL REAR BUMPER SIDE SEAL LH (See page [ET-9](#))**
4. **INSTALL REAR BUMPER SIDE SEAL RH (See page [ET-9](#))**
5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

