

ROOM LIGHT ASSEMBLY

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE NO. 1 ROOM LIGHT ASSEMBLY


(a) Remove the room light (see page [IR-8](#)).

INSPECTION

1. INSPECT NO. 1 ROOM LIGHT ASSEMBLY

(a) Check that the light operates properly.

OK

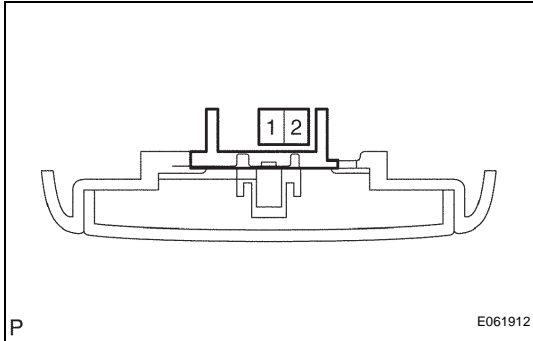

Tester Connection	Switch Condition	Specified Condition
Battery positive (+) → Terminal 2 Battery negative (-) → Terminal 1	ON	Light comes on
Battery positive (+) → Terminal 2 Battery negative (-) → Terminal 1	DOOR	Light comes on
Battery positive (+) → Terminal 2 Battery negative (-) → Terminal 1	OFF	Light does not come on

If the result is not as specified, replace the light assembly.

INSTALLATION

1. **INSTALL NO. 1 ROOM LIGHT ASSEMBLY**
 - (a) Install the room light (see page [IR-9](#)).
2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**