
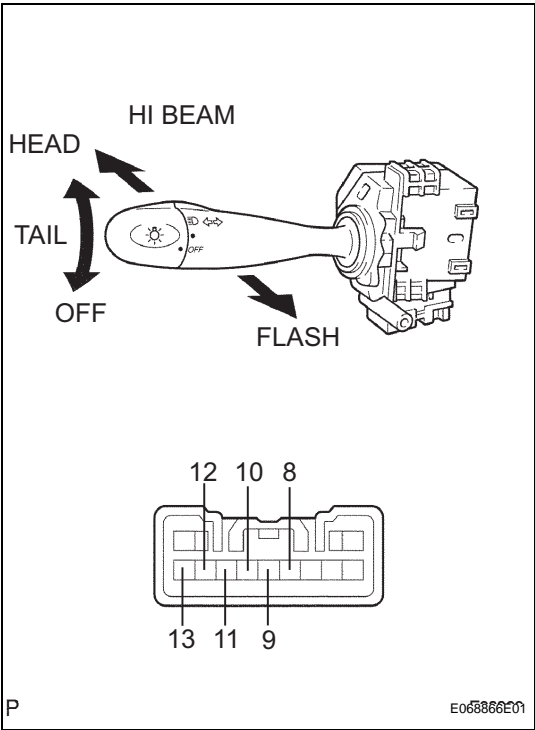


HEADLIGHT DIMMER SWITCH

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
- CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
2. REMOVE STEERING COLUMN COVER (See page SR-7)
3. REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY
- (a) Disconnect the connector of the headlight dimmer switch.
- (b) Using a screwdriver, detach the claw and pull out the headlight dimmer switch.
- NOTICE:
Pressing the claw too hard breaks the teeth.

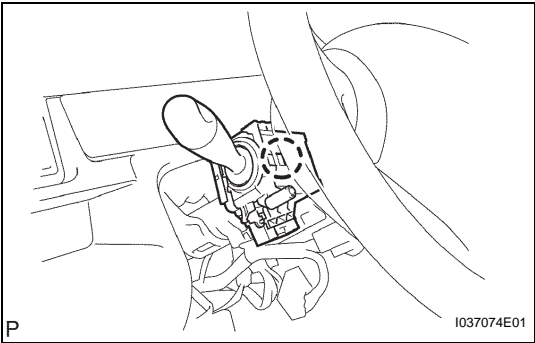


INSPECTION

1. INSPECT HEADLIGHT DIMMER SWITCH ASSEMBLY
- (a) Inspect the headlight dimmer switch continuity.
- (1) Measure the resistance of the switch.
- Standard resistance
- | Tester Connection | Switch Condition | Specified Condition |
|-------------------|------------------|---------------------|
| 10 - 13 | OFF | 10 kΩ or higher |
| 11 - 12 | OFF | 10 kΩ or higher |
| 10 - 13 | TAIL | Below 1 Ω |
| 10 - 13 | HEAD | Below 1 Ω |
| 11 - 12 | HEAD | Below 1 Ω |
- (b) Inspect the headlight dimmer switch.
- (1) Measure the resistance of the switch.

Standard resistance


Tester Connection	Switch Condition	Specified Condition
9 - 11	FLASH	Below 1 Ω
8 - 10	LOW BEAM	Below 1 Ω
9 - 11	HI BEAM	Below 1 Ω

HINT:
Turn the headlight dimmer switch to the HEAD position when checking "LOW BEAM" and "HI BEAM".
If the result is not as specified, replace the switch assembly.

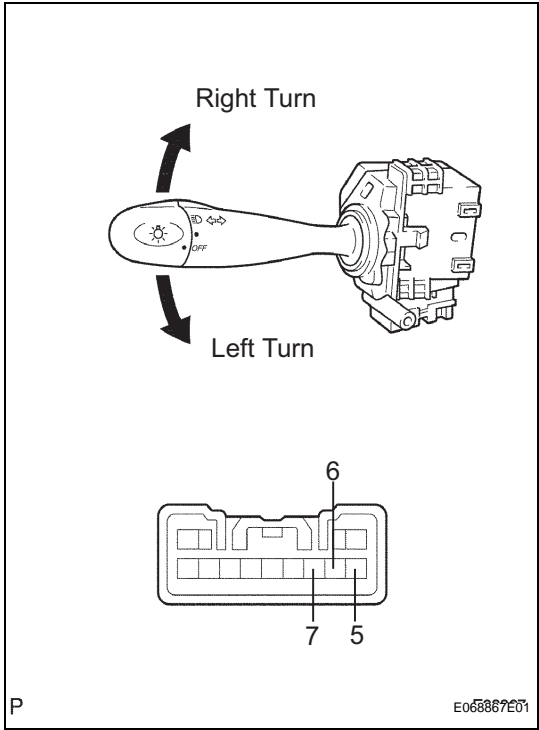

P

E068867E01

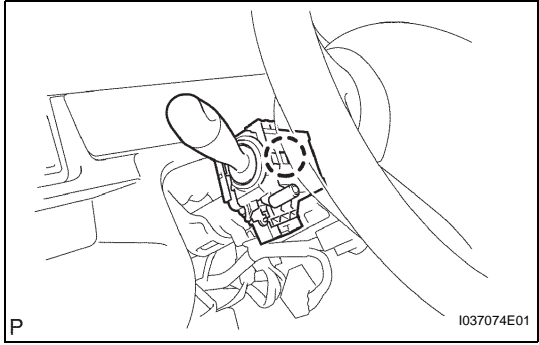

P

I037074E01

- (c) Inspect the turn signal switch.
(1) Measure the resistance of the switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
6 - 7	Right turn	Below 1 Ω
5 - 6 - 7	Neutral	10 k Ω or higher
5 - 6	Left turn	Below 1 Ω

If the result is not as specified, replace the switch assembly.

LI

INSTALLATION

- 1. INSTALL HEADLIGHT DIMMER SWITCH ASSEMBLY**
 - Attach the claw and install the headlight dimmer switch.
 - Connect the connector.
- 2. INSTALL STEERING COLUMN COVER (See page [SR-13](#))**
- 3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**