

HAZARD WARNING SWITCH

REMOVAL

- 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
- 2. REMOVE HEATER CONTROL KNOB (See page AC-104)
- 3. REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER (See page IP-6)
- 4. REMOVE CENTER CLUSTER MODULE SWITCH (See page AC-104)


INSPECTION

- 1. INSPECT CENTER CLUSTER MODULE SWITCH (HAZARD WARNING SWITCH)
 - (a) Measure the resistance of the switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 - 2	ON	Below 1 Ω
1 - 2	OFF	10 kΩ or higher

If the result is not as specified, replace the switch assembly.

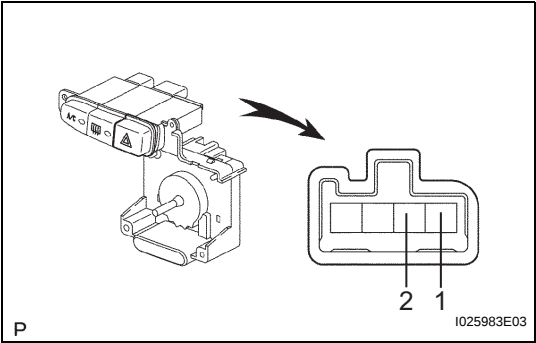

INSTALLATION

1. INSTALL CENTER CLUSTER MODULE SWITCH (See page [AC-107](#))
2. INSTALL INSTRUMENT CLUSTER FINISH PANEL CENTER (See page [IP-12](#))
3. INSTALL HEATER CONTROL KNOB (See page [AC-107](#))
4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

