


STOP LIGHT SWITCH

REMOVAL

- 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

- 2. REMOVE STOP LIGHT SWITCH ASSEMBLY (See page BR-8)

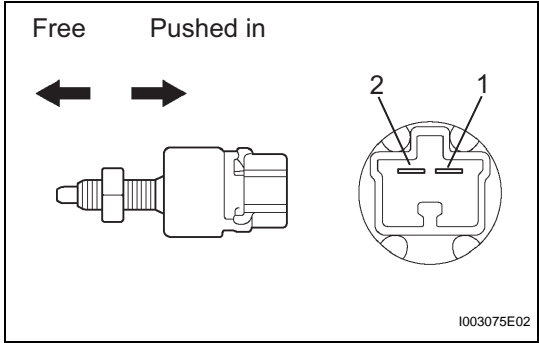

INSPECTION

- 1. INSPECT STOP LIGHT SWITCH ASSEMBLY

- (a) Inspect the stop light switch.
 - (1) Measure the resistance of the switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 - 2	Switch pin pushed in (Pedal released)	10 kΩ or higher
1 - 2	Switch pin free (Pedal depressed)	Below 1 Ω

If the result is not as specified, replace the switch assembly.

INSTALLATION

1. **INSTALL STOP LIGHT SWITCH ASSEMBLY** (See page [BR-10](#))
2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**