



TURN SIGNAL FLASHER ASSEMBLY

ON-VEHICLE INSPECTION

1. **INSPECT TURN SIGNAL FLASHER ASSEMBLY**
 - (a) Connect the connector to the turn signal flasher assembly and inspect the wire harness side connector from the back as shown in the table below.

Standard voltage

Tester connection	Condition	Specified Condition
2 - Body ground	Hazard warning switch OFF	0 V
2 - Body ground	Hazard warning switch ON	Alternating between 0 to 9 V (60 to 120 times per minute)
2 - Body ground	Turn signal switch (right turn) OFF	0 V
2 - Body ground	Turn signal switch (right turn) ON	Alternating between 0 to 9 V (60 to 120 times per minute)
3 - Body ground	Hazard warning switch OFF	0 V
3 - Body ground	Hazard warning switch ON	Alternating between 0 to 9 V (60 to 120 times per minute)
3 - Body ground	Turn signal switch (left turn) OFF	0 V
3 - Body ground	Turn signal switch (left turn) ON	Alternating between 0 to 9 V (60 to 120 times per minute)
5 - Body ground	Turn signal switch (left turn) OFF	Above 9 V
5 - Body ground	Turn signal switch (left turn) ON	0 V
6 - Body ground	Turn signal switch (right turn) OFF	Above 9 V
6 - Body ground	Turn signal switch (right turn) ON	0 V
8 - Body ground	Hazard warning switch OFF	Above 9 V
8 - Body ground	Hazard warning switch ON	0 V