

# HEADLIGHT RELAY

## REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE HEADLIGHT RELAY

## INSPECTION


1. INSPECT HEADLIGHT RELAY

(a) Measure the resistance of the relay.

**Standard resistance**

Tester Connection	Specified Condition
3 - 5	10 k $\Omega$ or higher
3 - 5	Below 1 $\Omega$ (When battery voltage is applied to terminals 1 - 2)

If the result is not as specified, replace the relay.

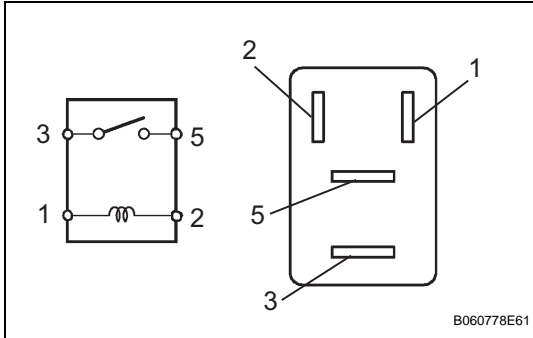

## INSTALLATION

1. INSTALL HEADLIGHT RELAY
2. CONNECT CABLE TO NEGATIVE BATTERY  
TERMINAL