



MANUAL TRANSAXLE OIL

ON-VEHICLE INSPECTION

1. INSPECT TRANSAXLE OIL

- (a) Stop the vehicle on a level surface.
- (b) Remove the filler plug and gasket.
- (c) Check that the oil level is between 0 to 5 mm (0 to 0.20 in.) from the bottom lip of the filler plug opening.

If the result is not as specified, add transaxle oil.

Oil grade:

API GL-4 or GL-5

Viscosity:

SAE 75W- 90

Standard capacity:

1.9 liters (2.0 US qts, 1.7 Imp. qts)

NOTICE:

- Too much or too little oil will lead to transaxle problems.
 - After adjusting the oil level, drive the vehicle and check the oil level again.
- (d) Check for oil leakage when the oil level is low. If leakage is found, repair the area necessary to stop the leak. Replace damaged parts as necessary.
 - (e) Install a new gasket and the filler plug.
Torque: 39 N*m (400 kgf*cm, 29 ft.*lbf)