

REMOVAL

1. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


- (a) Remove the shift lever knob (see page [IP-29](#)).

2. REMOVE REAR CONSOLE BOX ASSEMBLY


- (a) Remove the rear console box (see page [IP-29](#)).

3. REMOVE FLOOR SHIFT LEVER ASSEMBLY


- (a) Disconnect the wire harness.

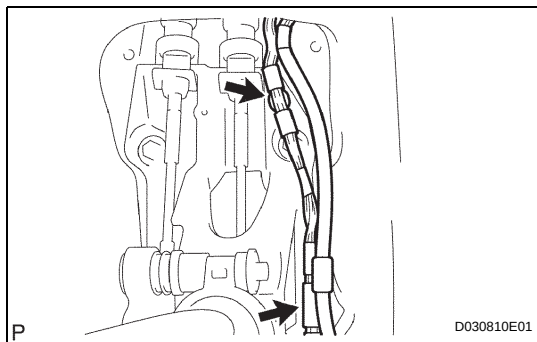


- (b) Remove the 4 bolts and disconnect the shift lever.

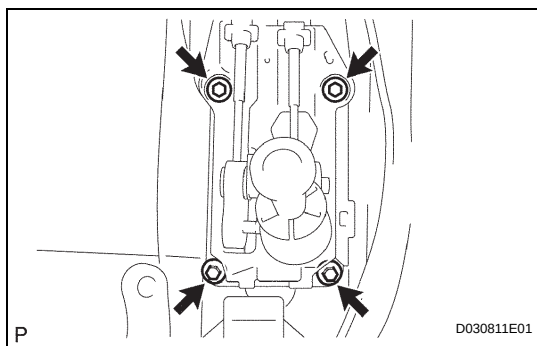


- (c) Remove the clip, and disconnect the cable end of the transmission control select cable from the floor shift lever.

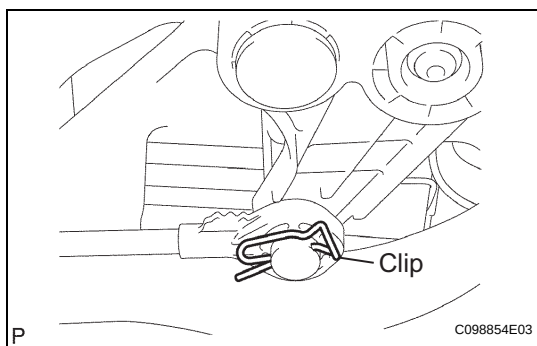


- (d) Using a screwdriver, detach the claw.
(e) Disconnect the transmission control select cable from the shift lever retainer.

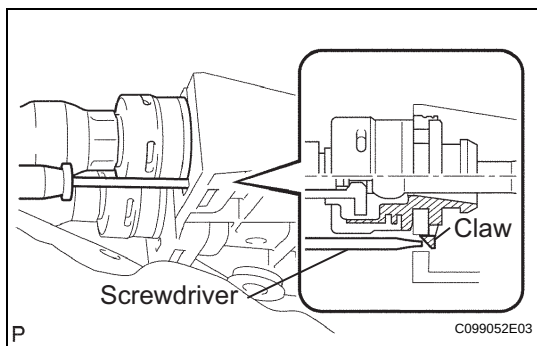


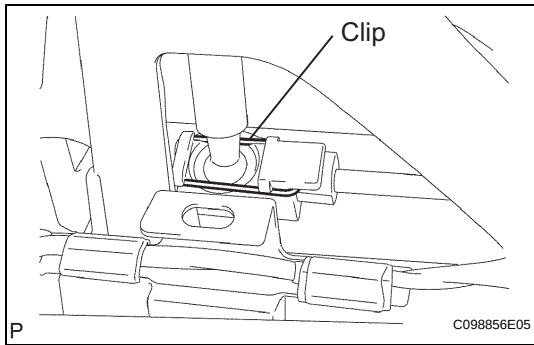

- (f) Remove the clip, and disconnect the cable end of the transmission control shift cable from the floor shift lever.

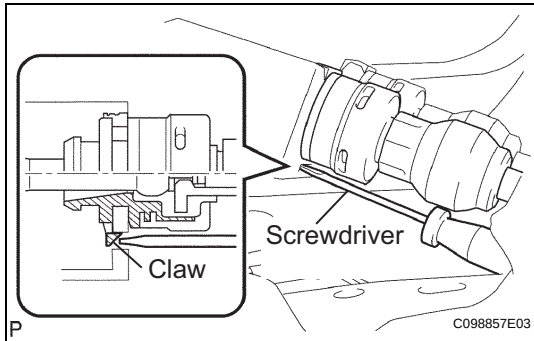


- (g) Using a screwdriver, detach the claw.
(h) Disconnect the transmission control shift cable from the shift lever retainer.

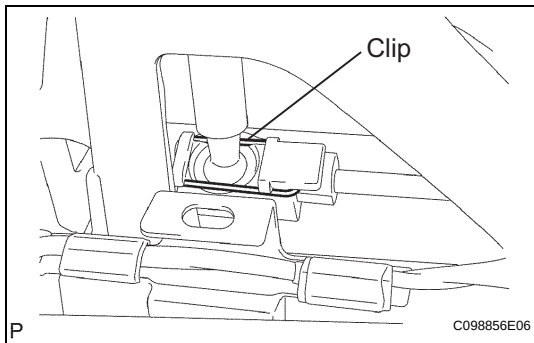

INSTALLATION

1. INSTALL FLOOR SHIFT LEVER ASSEMBLY


- (a) Connect the transmission control shift cable to the shift lever retainer with the clip.
(b) Connect the end of the transmission control shift cable to the floor shift lever.

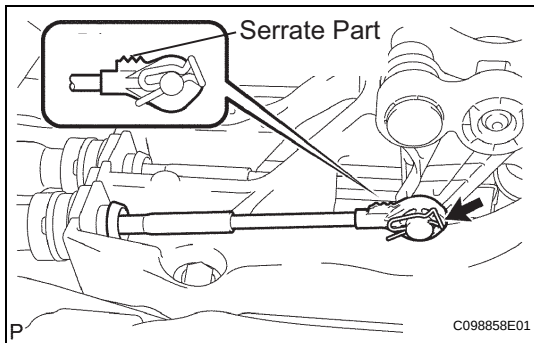


- (c) Connect the transmission control select cable to the shift lever retainer.
(d) Connect the end of the transmission control select cable to the floor shift lever with the clip.

NOTICE:

- The serrated part of the select cable point should face upward when the select cable point is connected.
- The clip should be inserted in the direction shown in the illustration.

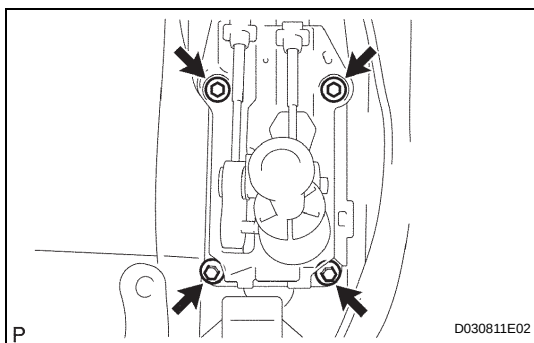

- (e) Install the shift lever with the 4 bolts.
Torque: 12 N*m (120 kgf*cm, 9 ft.*lbf)

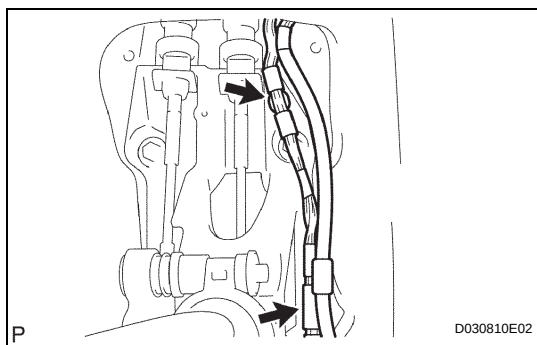

(f) Connect the wire harness.

2. INSTALL REAR CONSOLE BOX ASSEMBLY

(a) Install the rear console box (see page [IP-30](#)).

3. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

(a) Install the shift lever knob (see page [IP-28](#)).