


- (l) Remove the bolt and clamp.
- (m) Pull out the transmission control select cable and transmission control shift cable through the floor hole.

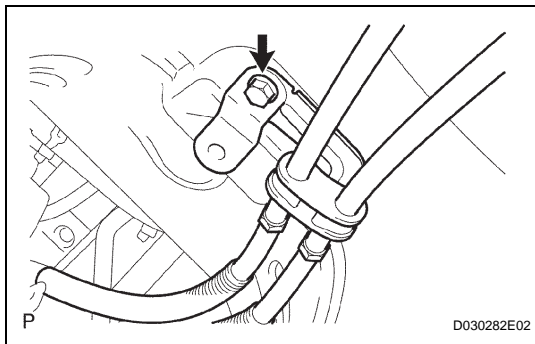


INSTALLATION

1. INSTALL TRANSMISSION CONTROL CABLE ASSEMBLY


- (a) Install the clamp with the bolt.
Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)
- (b) Insert the transmission control select cable and transmission control shift cable through the floor hole and retainer.
- (c) Install the transmission control select cable to the grommet.
- (d) Install the retainer on the grommet.

NOTICE:


Fit the projections of the grommet into the holes of the retainer.

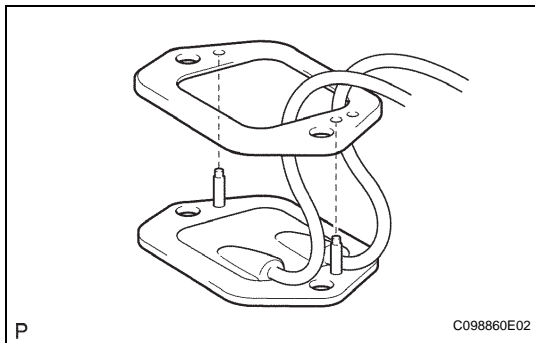


- (e) Install the retainer to the floor with the 2 bolts.
Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)
- (f) Connect the transmission control cable to the shift lever retainer.

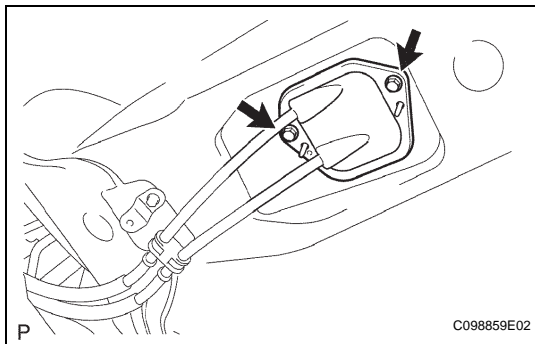

- (g) Connect the end of the transmission control shift cable to the floor shift lever with the clip.
- (h) Connect the transmission select cable to the shift lever retainer.

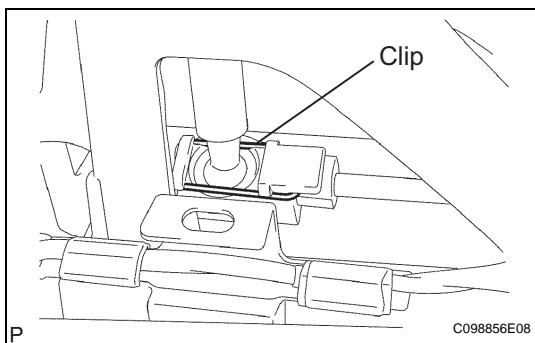


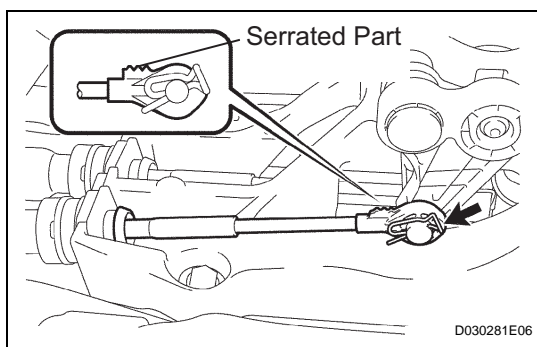

- (i) Connect the end of the transmission control select cable to the floor shift lever with the clip.


NOTICE:

- The serrated part of the select cable point should face upward when the select cable point is connected.
- The clip should be inserted in the direction shown in the illustration.

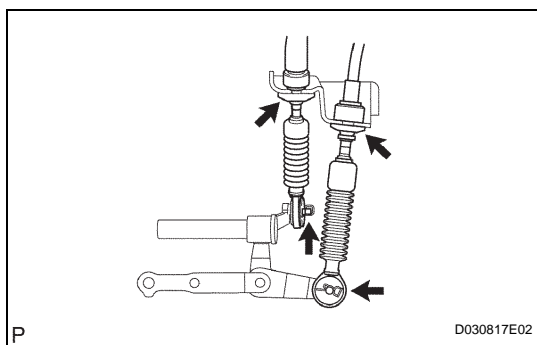


- (j) Connect the 2 cable ends to the transaxle with the 2 washers and 2 clips.

- (k) Install 2 new clips to the control cable bracket.

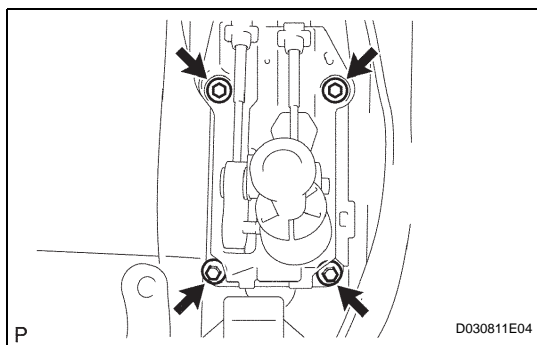**2. INSTALL FLOOR SHIFT LEVER ASSEMBLY**

- (a) Install the floor shift lever with the 4 bolts.
Torque: 12 N*m (120 kgf*cm, 9 ft.*lbf)

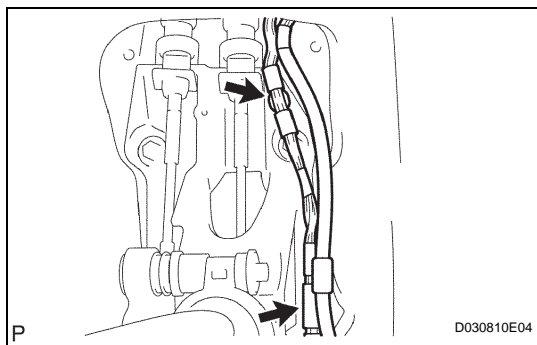

- (b) Connect the wire harness.

3. INSTALL REAR CONSOLE BOX ASSEMBLY

- (a) Install the rear console box (see page [IP-30](#)).

4. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

- (a) Install the shift lever knob (see page [IP-30](#)).

5. INSTALL FRONT NO.1 FLOOR HEAT INSULATOR

- Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)**