

HOW TO PROCEED WITH TROUBLESHOOTING

HINT:

- Use these procedures to troubleshoot the meter / gauge system.
- *: Use the intelligent tester.

1 VEHICLE BROUGHT TO WORKSHOP

NEXT

2 INSPECT BATTERY VOLTAGE

Standard voltage:

11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3 PROBLEM SYMPTOMS TABLE

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B

Go to step 5

A

4 OVERALL ANALYSIS AND TROUBLESHOOTING*

- (a) Terminals of ECU (see page [ME-9](#))
- (b) DATA LIST / ACTIVE TEST (see page [ME-17](#))
- (c) On-vehicle Inspection (see page [ME-18](#))

NEXT

5 REPAIR OR REPLACE

NEXT

ME

6	CONFIRMATION TEST
---	-------------------

NEXT

END

ME