

PROBLEM SYMPTOMS TABLE

HINT:

- Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected area" column of the table. Check each symptom by checking the suspected area in the order they are listed. Replace parts as necessary.
- Inspect the related fuses and relays before confirming the suspected area in the table below.

Malfunction system

Symptom	Suspected area	See page
Entire combination meter does not operate	Refer to troubleshooting	ME-22
Operating light control rheostat does not change light brightness	Refer to troubleshooting	ME-41

Meter gauges

Symptom	Suspected area	See page
Speedometer malfunction	Refer to troubleshooting	ME-24
Tachometer malfunction	Refer to troubleshooting	ME-26
Fuel receiver gauge malfunction	Refer to troubleshooting	ME-29

Warning lights

Symptom	Suspected area	See page
MIL does not turn on	Refer to troubleshooting	ES-321
Discharge warning light does not turn on	1. Generator assembly	CH-7
	2. Wire harness	-
	3. Combination meter assembly	-
Brake warning light does not turn on	1. Brake fluid level warning switch	-
	2. Parking brake switch assembly	-
	3. Wire harness	-
	4. Combination meter assembly	-
ABS warning light does not turn on	Refer to troubleshooting	BC-73
SRS warning light does not turn on	Refer to troubleshooting	RS-175
Open door warning does not turn on	1. Door courtesy light switch assembly	LI-29
	2. Wire harness	-
	3. Combination meter assembly	-
Fuel level warning light does not turn on	1. Fuel sender gauge assembly	-
	2. Wire harness	-
	3. Combination meter assembly	-
Low oil pressure warning light does not turn on	1. Oil pressure switch assembly	-
	2. Wire harness	-
	3. Combination meter assembly	-
Driver side seat belt warning light does not operate	Refer to troubleshooting	ME-36

Indicator lights

Symptom	Suspected area	See page
Turn indicator light does not turn on	1. Headlight dimmer switch assembly (turn signal switch)	LI-9
	2. Turn signal flasher relay	LI-32
	3. Wire harness	-
	4. Combination meter assembly	-

Symptom	Suspected area	See page
HI BEAM indicator light does not turn on	1. Headlight dimmer switch assembly	LI-9
	2. Wire harness	-
	3. Combination meter assembly	-
Taillight indicator light does not turn on	1. Headlight dimmer switch assembly	LI-9
	2. Wire harness	-
	3. Combination meter assembly	-
Front passenger seat belt warning light does not operate	Refer to troubleshooting	ME-38

Warning buzzer

Symptom	Suspected area	See page
Key reminder warning buzzer does not sound	Refer to troubleshooting	ME-31
Light reminder warning buzzer does not sound	Refer to troubleshooting	ME-31
Seat belt reminder warning buzzer does not sound	Refer to troubleshooting	ME-36