



INNER REAR VIEW MIRROR

COMPONENTS

MI

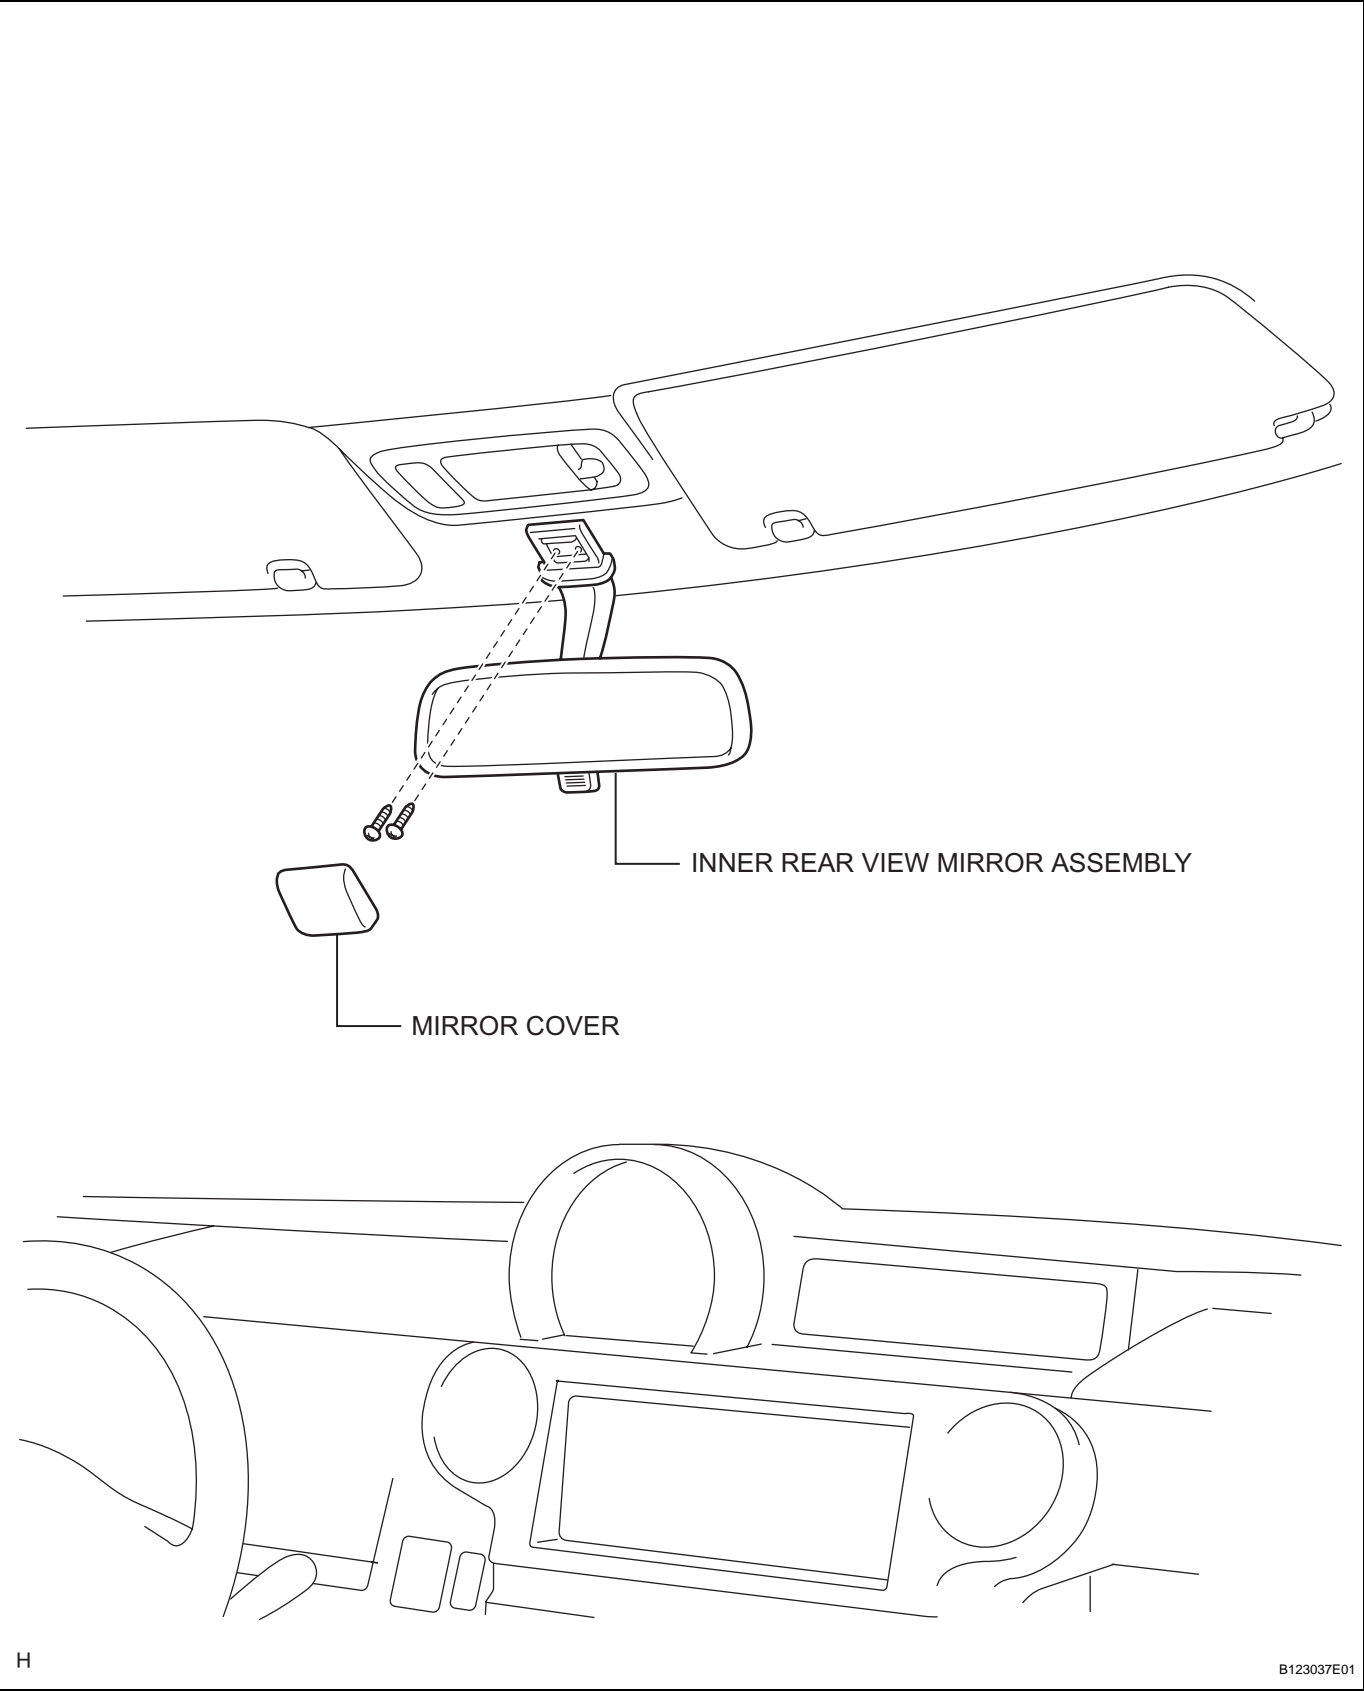

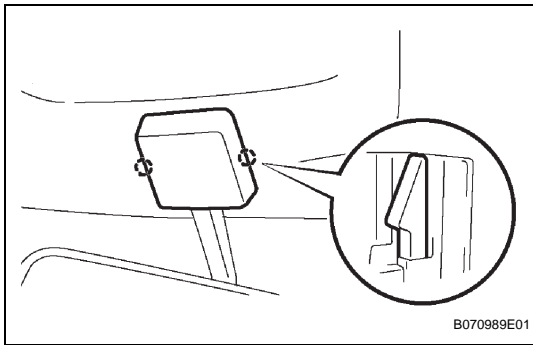

REMOVAL


1. REMOVE INNER REAR VIEW MIRROR ASSEMBLY

- (a) Using a screwdriver, detach the claws and mirror cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and mirror.

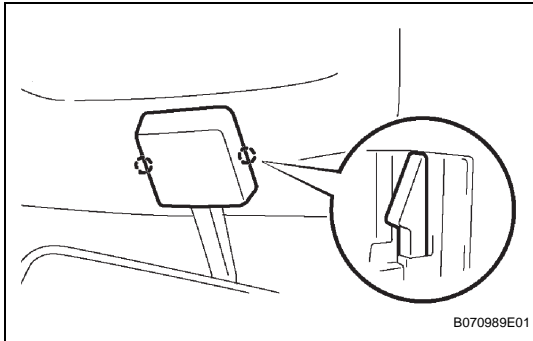

INSTALLATION

1. INSTALL INNER REAR VIEW MIRROR ASSEMBLY

- (a) Install the mirror with the 2 screws.
- (b) Install the mirror cover.