


INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

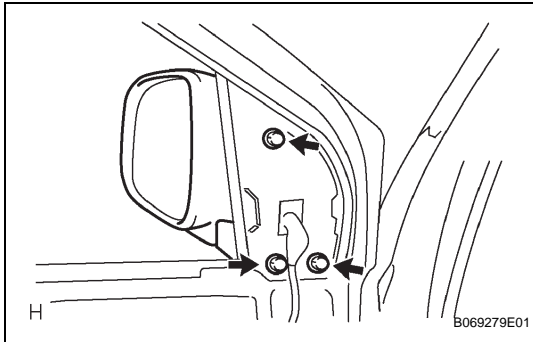

1. **INSTALL OUTER REAR VIEW MIRROR ASSEMBLY LH**
 - (a) Install the mirror with the 3 nuts.
Torque: 8.0 N*m (82 kgf*cm, 71 in.*lbf)
 - (b) Connect the connector.
2. **INSTALL FRONT DOOR SERVICE HOLE COVER LH**
3. **INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH** (See page [ED-18](#))
4. **INSTALL POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY** (See page [ED-18](#))
5. **INSTALL DOOR PULL HANDLE** (See page [ED-18](#))
6. **INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH** (See page [ED-19](#))