


INSTALLATION

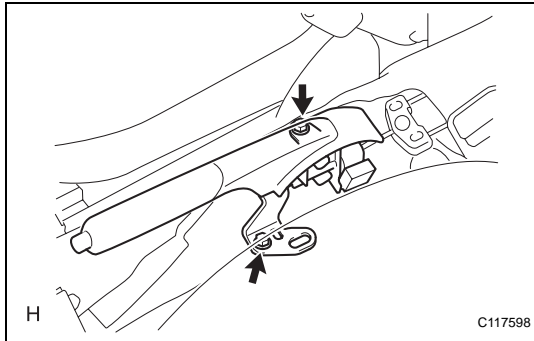

1. **INSTALL PARKING BRAKE SWITCH ASSEMBLY**
 - (a) Install the parking brake switch with the screw.
2. **INSTALL PARKING BRAKE LEVER SUB-ASSEMBLY**
 - (a) Connect the parking brake pull rod to the lever.
 - (b) Install the parking brake lever with the 2 bolts.
Torque: 13 N*m (127 kgf*cm, 9 ft.*lbf)
 - (c) Connect the parking brake switch connector.
3. **INSTALL NO. 1 WIRE ADJUSTING NUT**
 - (a) Install the wire adjusting nut and lock nut.
Torque: 5.4 N*m (55 kgf*cm, 48 in.*lbf)
4. **INSTALL REAR CONSOLE BOX ASSEMBLY (See page [IP-30](#))**
5. **INSTALL CONSOLE BOX CARPET**
6. **INSTALL REAR CONSOLE BOX COVER**
7. **INSTALL STEREO JACK ADAPTER ASSEMBLY**
8. **INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transaxle)**
9. **CHECK PARKING BRAKE LEVER TRAVEL (See page [PB-1](#))**
10. **ADJUST PARKING BRAKE LEVER TRAVEL (See page [PB-1](#))**