
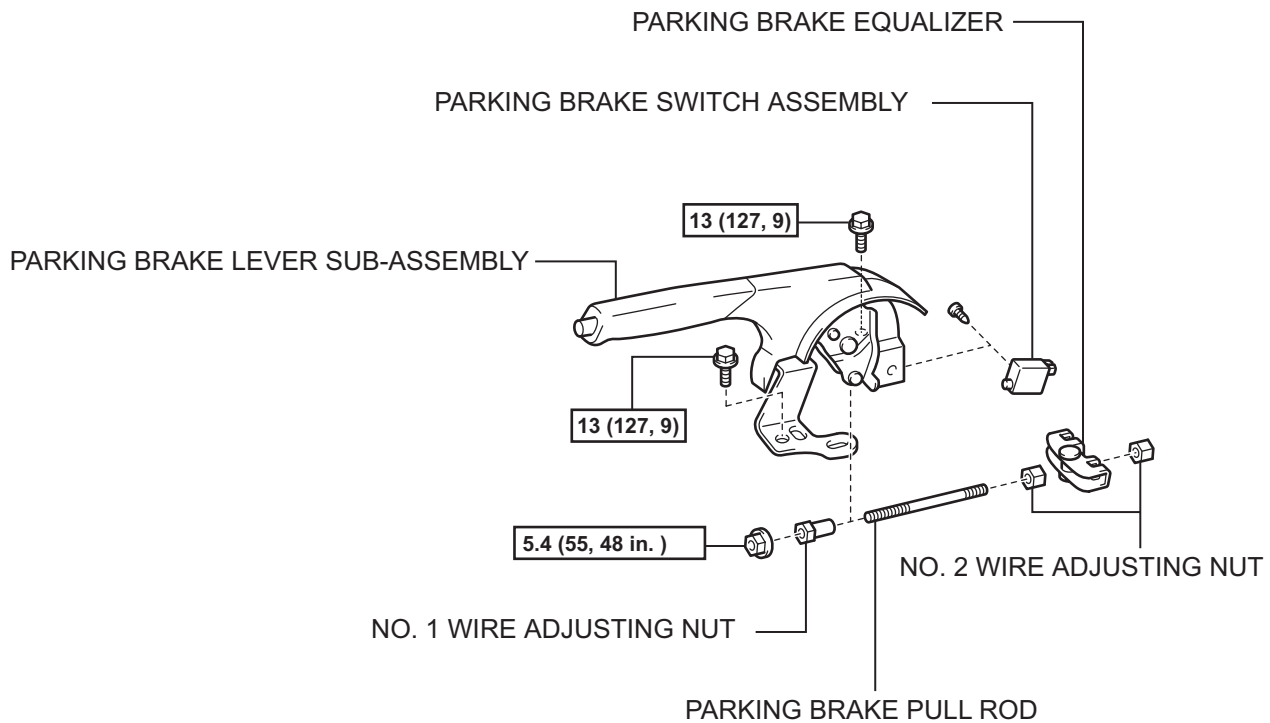


PARKING BRAKE LEVER

COMPONENTS

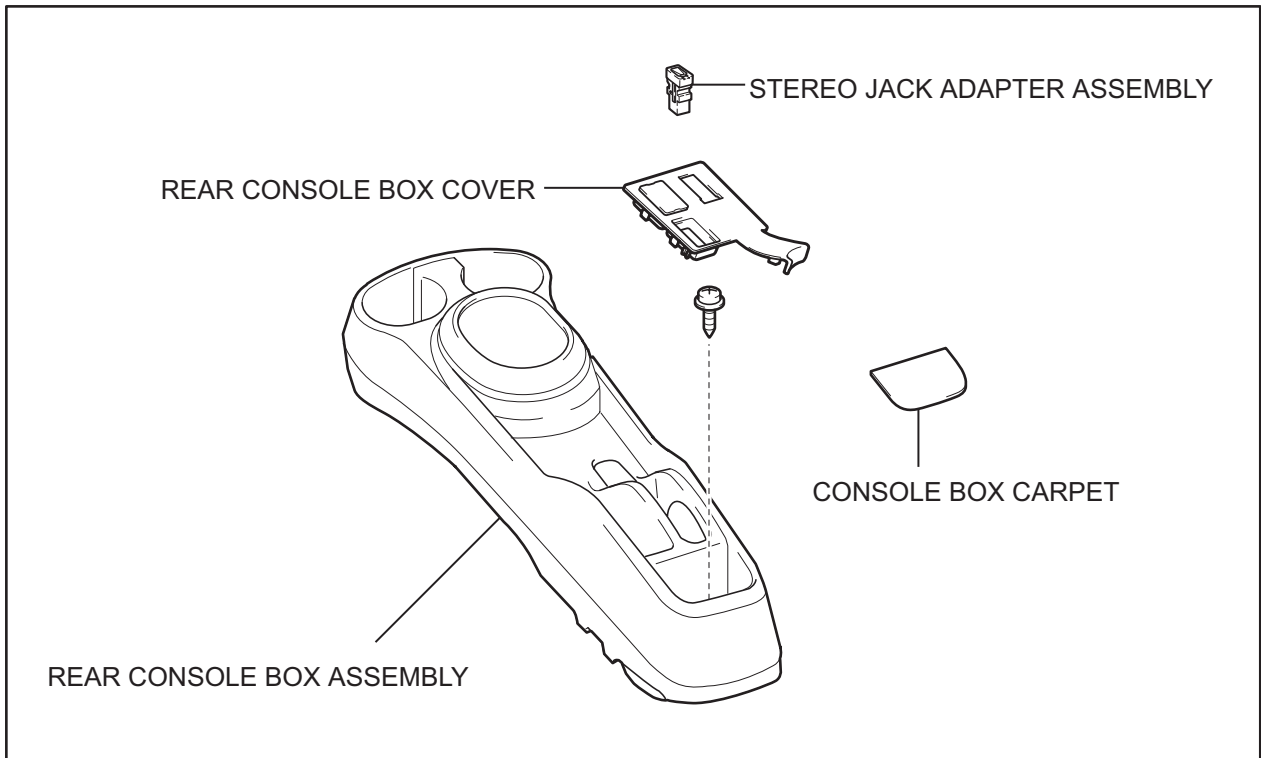

N*m (kgf*cm, ft.*lbf) : Specified torque

PB

REMOVAL

1. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transaxle)
2. REMOVE STEREO JACK ADAPTER ASSEMBLY
3. REMOVE REAR CONSOLE BOX COVER
4. REMOVE CONSOLE BOX CARPET
5. REMOVE REAR CONSOLE BOX ASSEMBLY (See page [IP-29](#))
6. REMOVE NO. 1 WIRE ADJUSTING NUT
 - (a) Remove the lock nut and wire adjusting nut.
7. REMOVE PARKING BRAKE LEVER SUB-ASSEMBLY
 - (a) Disconnect the parking brake switch connector.
 - (b) Disconnect the parking brake pull rod.
 - (c) Remove the 2 bolts and parking brake lever.
8. REMOVE PARKING BRAKE SWITCH ASSEMBLY
 - (a) Remove the screw and parking brake switch.

