

INSTALLATION


HINT:

- Use the same procedures for the No. 2 parking brake cable and No. 3 parking brake cable.
- The procedures listed below are for the No. 3 parking brake cable.

1. INSTALL NO. 3 PARKING BRAKE CABLE ASSEMBLY

- Connect the parking brake cable to the parking brake equalizer.
- Install the parking brake cable to the body with the nut and 3 bolts.

Torque: 5.4 N*m (55 kgf*cm, 48 in.*lbf)

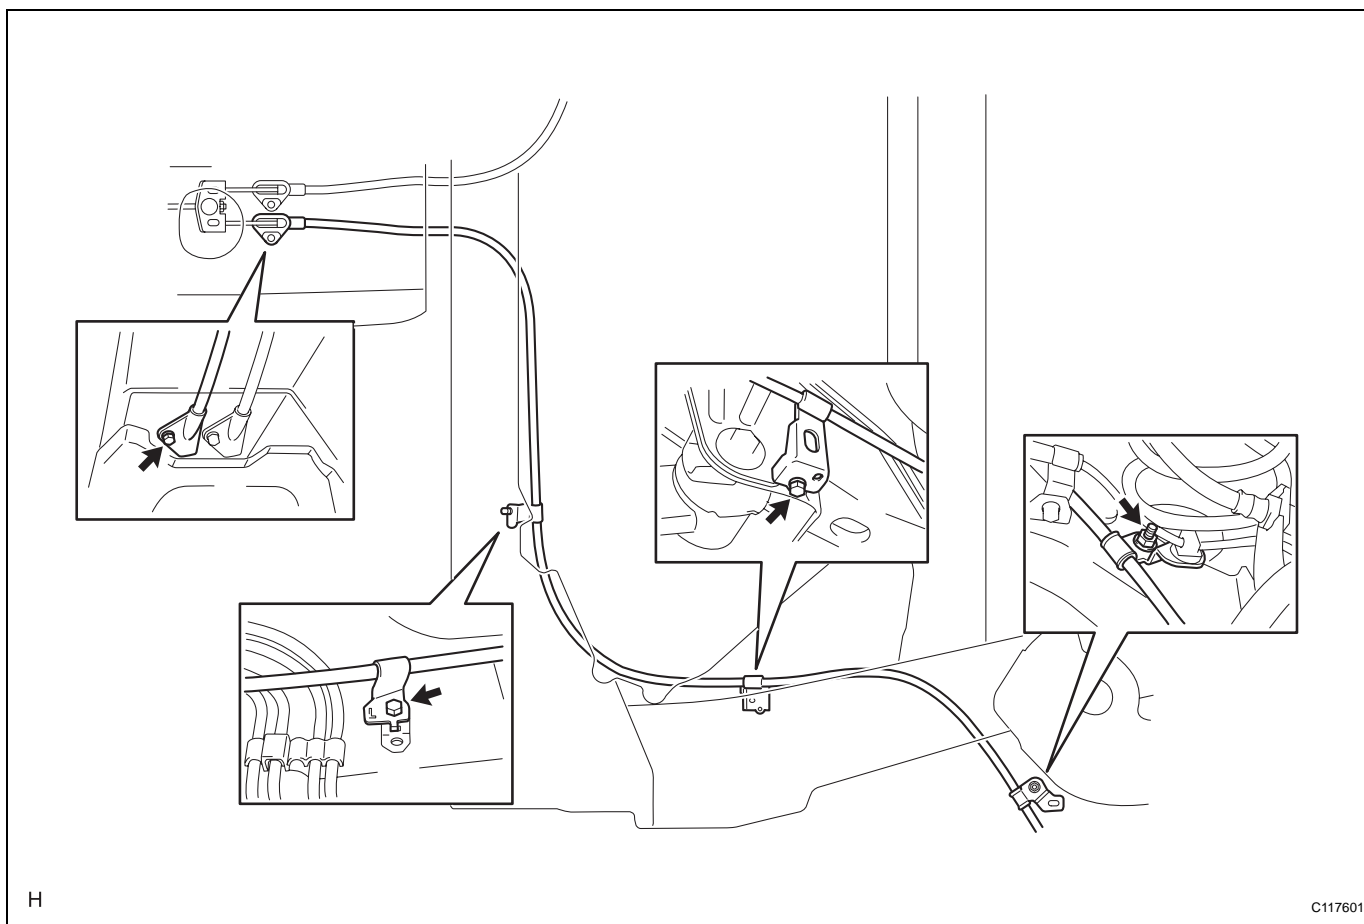

2. CONNECT NO. 3 PARKING BRAKE CABLE ASSEMBLY

- Connect the parking brake cable to the backing plate with the bolt.

Torque: 7.8 N*m (80 kgf*cm, 69 in.*lbf)

3. APPLY HIGH TEMPERATURE GREASE (See page [BR-34](#))

4. INSTALL REAR BRAKE SHOE (See page [BR-35](#))

5. INSTALL REAR BRAKE AUTOMATIC ADJUST LEVER LH (See page [BR-35](#))

6. INSTALL PARKING BRAKE SHOE STRUT LH (See page [BR-35](#))

7. **INSTALL FRONT BRAKE SHOE** (See page [BR-36](#))
8. **CONNECT REAR BRAKE SHOE RETURN SPRING**
(See page [BR-36](#))
9. **CHECK REAR BRAKE DRUM INSTALLATION** (See page [BR-37](#))
10. **INSTALL REAR BRAKE DRUM SUB-ASSEMBLY**
11. **ADJUST REAR BRAKE DRUM SHOE CLEARANCE**
(See page [BR-38](#))
12. **INSTALL REAR WHEEL**
Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)
13. **INSTALL FRONT NO. 2 FLOOR HEAT INSULATOR**
(a) Install the heat insulator with the 3 bolts.
Torque: 5.5 N*m (55 kgf*cm, 48 in.*lbf)
14. **INSTALL FRONT EXHAUST PIPE ASSEMBLY** (See page [EX-5](#))
15. **INSTALL FRONT FLOOR PANEL BRACE**
(a) Install the floor panel brace with the 2 bolts.
16. **TEMPORARILY TIGHTEN NO. 1 WIRE ADJUSTING NUT**
(a) Temporarily tighten the wire adjusting nut.
17. **CHECK PARKING BRAKE LEVER TRAVEL** (See page [PB-1](#))
18. **ADJUST PARKING BRAKE LEVER TRAVEL** (See page [PB-1](#))
19. **INSTALL REAR CONSOLE BOX ASSEMBLY** (See page [IP-30](#))
20. **INSTALL CONSOLE BOX CARPET**
21. **INSTALL REAR CONSOLE BOX COVER**
22. **INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY** (for Manual Transaxle)
23. **CHECK EXHAUST GAS LEAKAGE**