


PARKING BRAKE CABLE


COMPONENTS

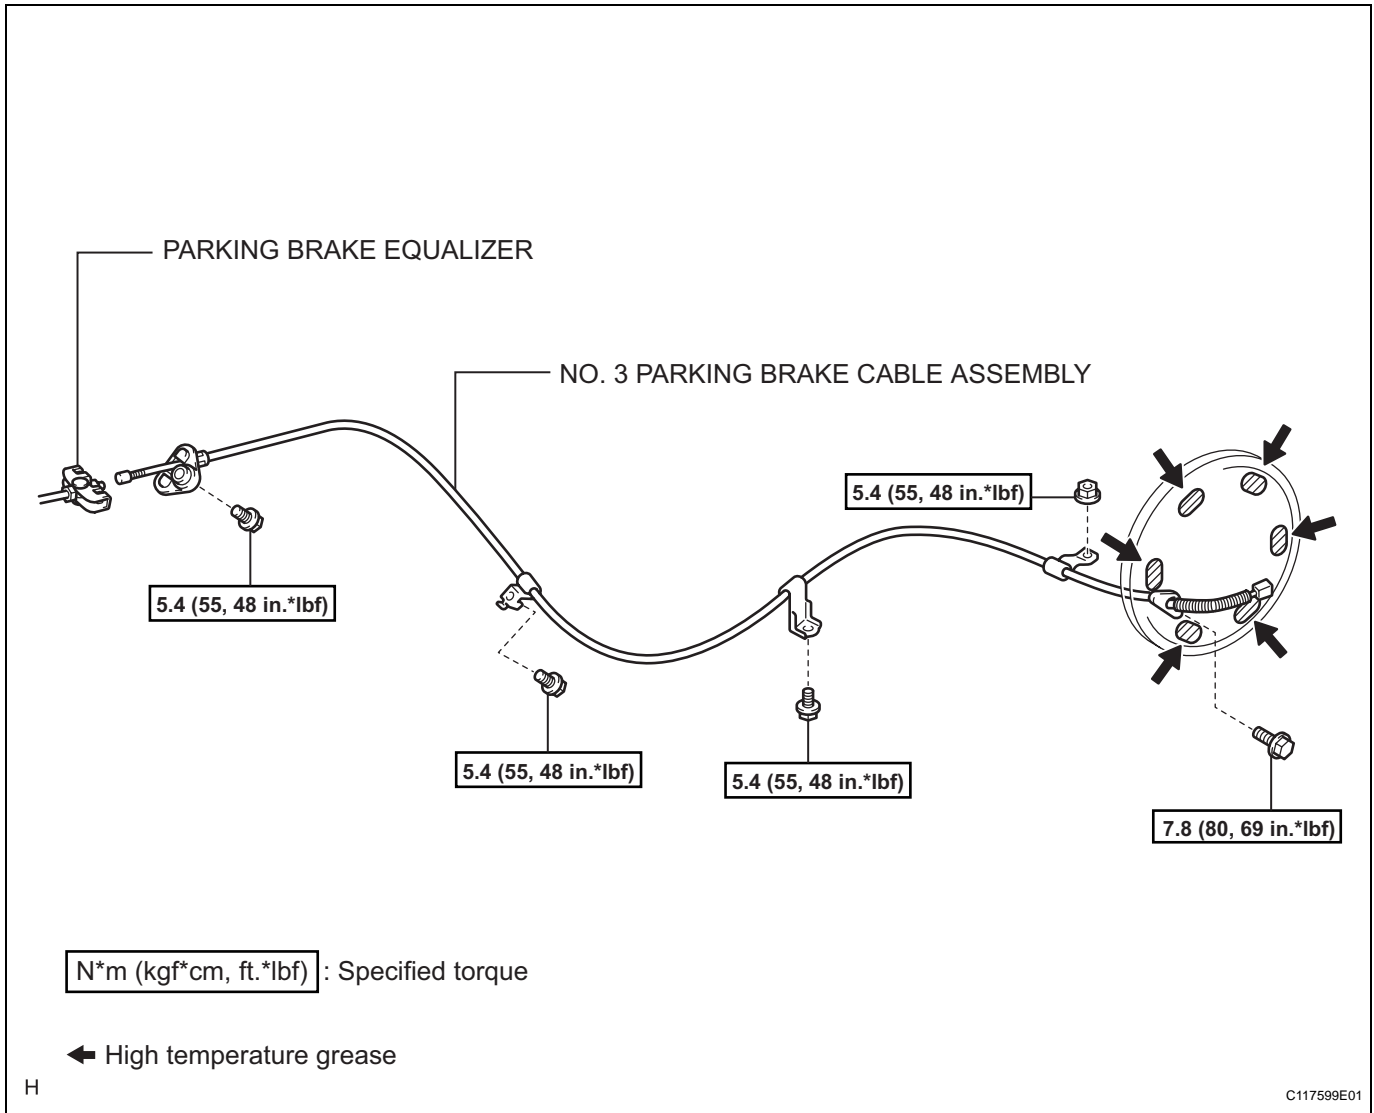

REMOVAL

HINT:

- Use the same procedures for the No. 2 parking brake cable and No. 3 parking brake cable.
 - The procedures listed below are for the No. 3 parking brake cable.
1. **REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transaxle)**
 2. **REMOVE REAR CONSOLE BOX COVER**
 3. **REMOVE CONSOLE BOX CARPET**
 4. **REMOVE REAR CONSOLE BOX ASSEMBLY (See page [IP-29](#))**
 5. **REMOVE NO. 1 WIRE ADJUSTING NUT**
 - (a) Remove the No. 1 wire adjusting nut.
 6. **REMOVE FRONT FLOOR PANEL BRACE**
 - (a) Remove the 2 bolts and floor panel brace.
 7. **REMOVE FRONT EXHAUST PIPE ASSEMBLY (See page [EX-3](#))**
 8. **REMOVE FRONT NO. 2 FLOOR HEAT INSULATOR**
 - (a) Remove the 3 bolts and heat insulator.
 9. **DISCONNECT NO. 3 PARKING BRAKE CABLE ASSEMBLY**
 - (a) Remove the nut and 3 bolts, and then disconnect the parking brake cable from the body.
 - (b) Disconnect the parking brake cable from the parking brake equalizer.
 10. **REMOVE REAR WHEEL**
 11. **REMOVE REAR BRAKE DRUM SUB-ASSEMBLY (See page [BR-31](#))**
 12. **DISCONNECT PARKING BRAKE SHOE STRUT LH (See page [BR-31](#))**
 13. **REMOVE FRONT BRAKE SHOE (See page [BR-32](#))**
 14. **REMOVE PARKING BRAKE SHOE STRUT LH (See page [BR-32](#))**
 15. **REMOVE REAR BRAKE AUTOMATIC ADJUST LEVER LH (See page [BR-32](#))**
 16. **REMOVE REAR BRAKE SHOE (See page [BR-32](#))**

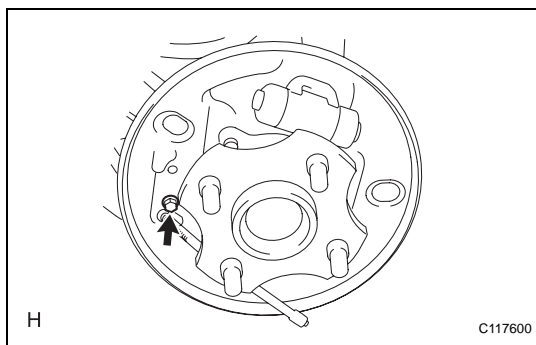

17. REMOVE NO. 3 PARKING BRAKE CABLE ASSEMBLY

- (a) Remove the bolt and then disconnect the parking brake cable from the backing plate.