

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Seat belt warning system

Symptom	Suspected area	See page
Driver side seat belt warning light does not light up	1. GAUGE fuse	SB-1
	2. Combination meter	ME-49
	3. Center airbag sensor assembly	RS-210
	4. Front seat inner belt assembly LH	SB-5
	5. Wire harness	
Driver side seat belt warning light does not blink	1. Combination meter	ME-49
	2. Center airbag sensor assembly	RS-210
	3. Front seat inner belt assembly LH	SB-5
	4. Wire harness	
Passenger side seat belt warning light does not light up	1. GAUGE fuse	SB-1
	2. Occupant detection sensor	SB-6
	3. Instrument panel garnish sub-assembly	ME-36
	4. Front seat inner belt assembly RH	SB-6
	5. Combination meter	ME-49
	6. Wire harness	
Passenger side seat belt warning light does not blink	1. Instrument panel garnish sub-assembly	AC-105
	2. Occupant detection sensor	SB-6
	3. Front seat inner belt assembly RH	SB-6
	4. Combination meter	ME-49
	5. Wire harness	