
B121132E01

SEAT BELT WARNING SYSTEM PARTS LOCATION

COMBINATION METER - DRIVER SEAT BELT WARNING LIGHT PASSENGER SEAT BELT WARNING LIGHT FRONT SEAT INNER BELT ASSEMBLY LH FRONT SEAT INNER BELT ASSEMBLY RH -OCCUPANT DETECTION SENSOR (BUILT INTO PASSENGER SEAT)

SB

SYSTEM DIAGRAM

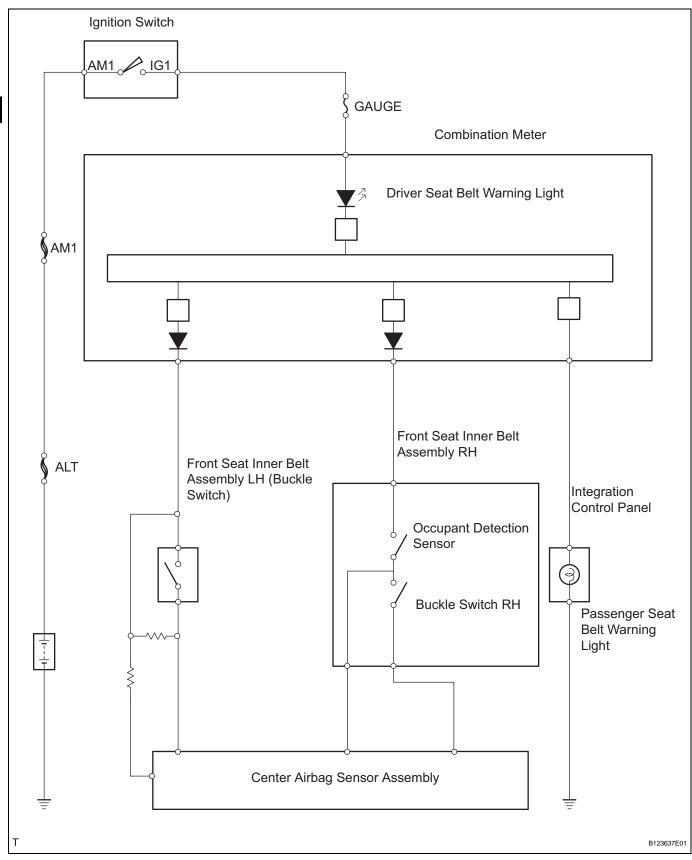

SB