

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the RH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

1. **INSTALL FRONT SEAT INNER BELT ASSEMBLY RH**
 - (a) Install the inner belt with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
2. **INSTALL FRONT SEAT ASSEMBLY RH (See page [SE-8](#))**
3. **INSTALL SEAT TRACK BRACKET COVER INNER RH (See page [SE-9](#))**
4. **INSTALL SEAT TRACK OUTER COVER RH (See page [SE-8](#))**
5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**