

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the RH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE FRONT DOOR SCUFF PLATE RH (See page IR-6)

3. REMOVE COWL SIDE TRIM BOARD RH (See page IR-6)

4. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

5. REMOVE REAR DOOR SCUFF PLATE RH (See page IR-6)

6. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

7. REMOVE CENTER PILLAR GARNISH LOWER RH (See page IR-6)

8. REMOVE FRONT SEAT OUTER BELT ASSEMBLY RH

CAUTION:


Carefully read the notices for the pretensioner in the SRS airbag system section and the front seat outer belt section (see page RS-1).


- Remove the floor anchor cover.
- Remove the bolt and the outer belt on the floor anchor side.
- Remove the shoulder anchor cover.
- Remove the bolt and outer belt on the shoulder anchor side.
- Disconnect the pretensioner connector as shown in the illustration.
- Remove the 2 bolts on the retractor side and remove the outer belt completely.

9. REMOVE CENTER PILLAR GARNISH UPPER RH (See page IR-7)

10. REMOVE FRONT SHOULDER BELT ANCHOR ADJUSTER ASSEMBLY

- Remove the 2 bolts and anchor adjuster.

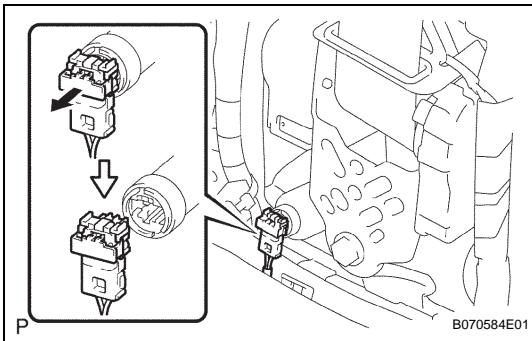

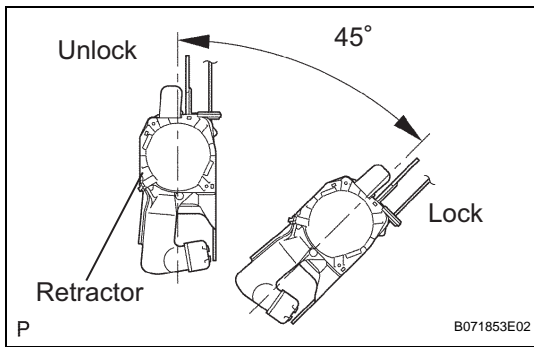

INSPECTION

1. INSPECT FRONT SEAT OUTER BELT ASSEMBLY

NOTICE:

Do not disassemble the retractor.

- (a) When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks. If the operation is not as specified, replace the belt.