

## REMOVAL

1. **REMOVE REAR SEAT CUSHION WITH COVER PAD SUB-ASSEMBLY (See page SE-12)**
2. **REMOVE REAR SEAT INNER BELT ASSEMBLY LH**
  - (a) Remove the bolt and inner belt.
3. **REMOVE REAR SEAT INNER BELT ASSEMBLY RH**
  - (a) Remove the bolt and inner belt.
4. **REMOVE REAR SEATBACK ASSEMBLY LH (See page SE-12)**
5. **REMOVE REAR SEATBACK ASSEMBLY RH (See page SE-12)**
6. **REMOVE CHILD RESTRAINT SEAT TETHER ANCHOR BRACKET SUB-ASSEMBLY**
  - (a) Remove the 4 bolts and anchor bracket.

## INSTALLATION

### HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

#### 1. INSTALL CHILD RESTRAINT SEAT TETHER ANCHOR BRACKET SUB-ASSEMBLY

- (a) Install the anchor bracket with the 4 bolts.  
**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**

#### 2. INSTALL REAR SEATBACK ASSEMBLY LH (See page [SE-17](#))

#### 3. INSTALL REAR SEATBACK ASSEMBLY RH (See page [SE-17](#))



#### 4. INSTALL REAR SEAT INNER WITH CENTER BELT ASSEMBLY LH

- (a) Install the floor anchor and belt with the bolt, as shown in the illustration.

**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**

#### NOTICE:

**Make sure that the anchor part does not run onto the protruding part of the floor panel.**

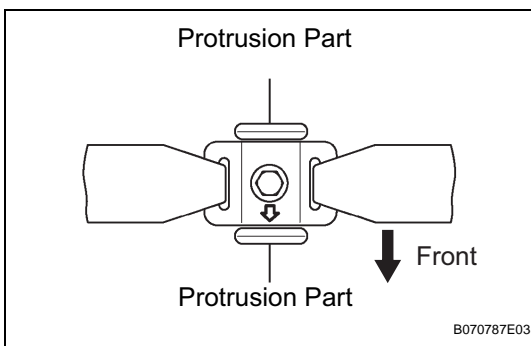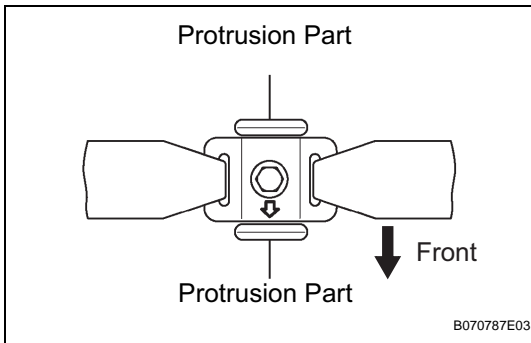

#### 5. INSTALL REAR SEAT INNER WITH CENTER BELT ASSEMBLY RH

- (a) Install the floor anchor and belt with the bolt, as shown in the illustration.

**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**

#### NOTICE:

**Make sure that the anchor part does not run onto the protruding part of the floor panel.**

#### 6. INSTALL REAR SEAT CUSHION WITH COVER PAD SUB-ASSEMBLY (See page [SE-17](#))