

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the RH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE REAR DOOR SCUFF PLATE RH (See page [IR-6](#))
3. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH
4. REMOVE NO. 1 DECK BOARD
5. REMOVE NO. 2 DECK BOARD
6. REMOVE DECK FLOOR BOX RH
7. REMOVE DECK FLOOR BOX LH
8. REMOVE SPARE WHEEL COVER ASSEMBLY
9. REMOVE REAR SEAT CUSHION WITH COVER PAD SUB-ASSEMBLY (See page [SE-12](#))
10. REMOVE REAR SEATBACK ASSEMBLY LH (See page [SE-12](#))
11. REMOVE REAR SEATBACK ASSEMBLY RH (See page [SE-12](#))
12. REMOVE BACK DOOR WEATHERSTRIP
13. REMOVE REAR DECK TRIM COVER (See page [IR-7](#))
14. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (See page [IR-7](#))
15. REMOVE ROOF SIDE GARNISH INNER RH (See page [IR-7](#))
16. REMOVE REAR SEAT 3 POINT TYPE BELT ASSEMBLY RH
 - (a) Remove the 2 bolts and outer belt.
17. REMOVE REAR SEAT BELT ASSEMBLY OUTER CENTER

HINT:

RH side only.

- (a) Remove the rear seat headrest assembly (see page [SE-12](#)).
- (b) Remove the rear seatback lock release button (see page [SE-13](#)).
- (c) Remove the 2 tether anchor covers (see page [SE-13](#)).
- (d) Remove the 4 rear seat headrest supports (see page [SE-14](#)).

- (e) Remove the rear seatback stop button grommet (see page [SE-13](#)).
- (f) Remove the rear seatback cover (with pad) RH (see page [SE-14](#)).
- (g) Remove the nut on the retractor side and completely remove the belt.