

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL FRONT SEAT ASSEMBLY

- (a) Place the seat in the cabin.

NOTICE:


Be careful not to damage the vehicle body.

- (b) Connect the connectors under the seat.
 (c) Tighten the 4 bolts.

Torque: 37 N*m (375 kgf*cm, 27 ft.*lbf)


2. INSTALL SEAT TRACK OUTER COVER LH

- (a) Attach the 4 claws to install the seat track outer cover.

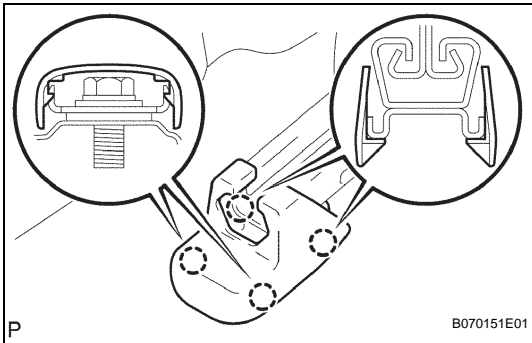

3. INSTALL SEAT TRACK BRACKET COVER INNER LH

- (a) Attach the 2 claws to install the seat track bracket cover.

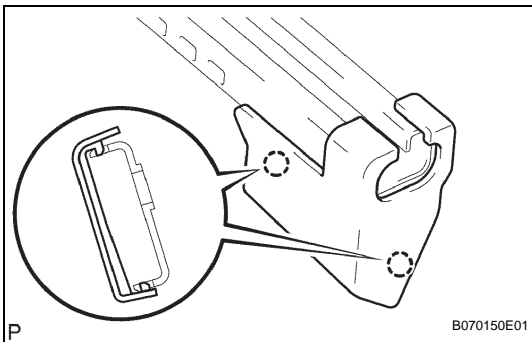

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL