



REMOVAL


1. **PRECAUTION**
 - (a) Precaution (see page [RS-1](#)).
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
 Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE STEERING PAD ASSEMBLY (See page [RS-187](#))**

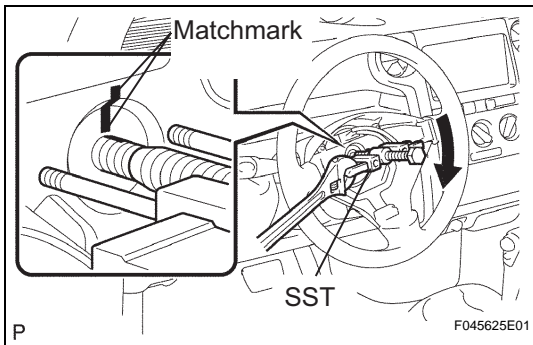


5. **REMOVE STEERING WHEEL ASSEMBLY**
 - (a) Disconnect the connector.
 - (b) Remove the steering wheel set nut.
 - (c) Put matchmarks on the steering wheel and main shaft.
 - (d) Using SST, remove the steering wheel.
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)

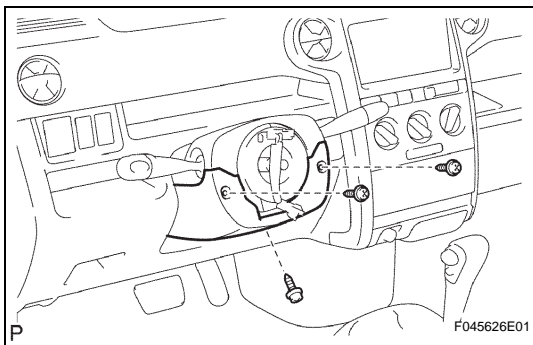

6. **REMOVE STEERING COLUMN COVER**
 - (a) Remove the 3 screws and column cover lower.

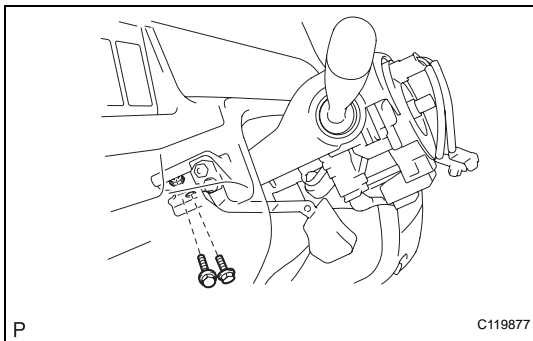

- (b) Remove the 2 bolts and column cover upper.

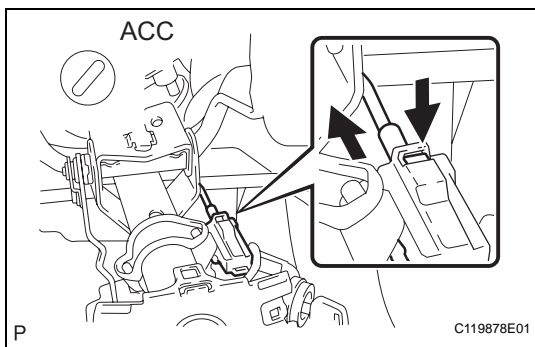

7. DISCONNECT FLOOR SHIFT PARKING LOCK CABLE ASSEMBLY (for Automatic Transaxle)

- (a) With the key in the ACC position, detach the claw and pull out the floor shift parking lock cable.

8. REMOVE SPIRAL CABLE SUB-ASSEMBLY (See page [RS-197](#))

9. REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY (See page [LI-24](#))


10. REMOVE WINDSHIELD WIPER SWITCH ASSEMBLY (See page [WW-22](#))

11. REMOVE STEERING COLUMN HOLE COVER PLATE

- (a) Remove the clip and column hole cover plate.


12. DISCONNECT STEERING INTERMEDIATE SHAFT ASSEMBLY

- (a) Put matchmarks on the sliding yoke and intermediate shaft.
 (b) Remove the bolt and intermediate shaft.

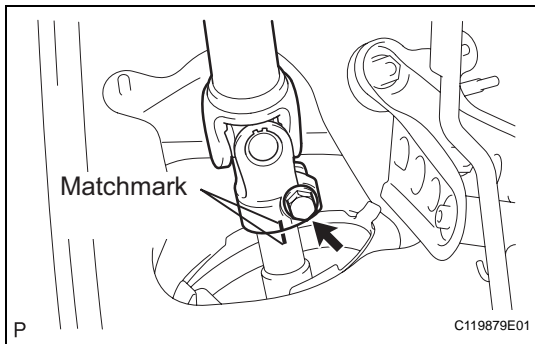

13. REMOVE STEERING INTERMEDIATE SHAFT ASSEMBLY

- (a) Put matchmarks on the main shaft and intermediate shaft.
 (b) Remove the bolt and intermediate shaft.

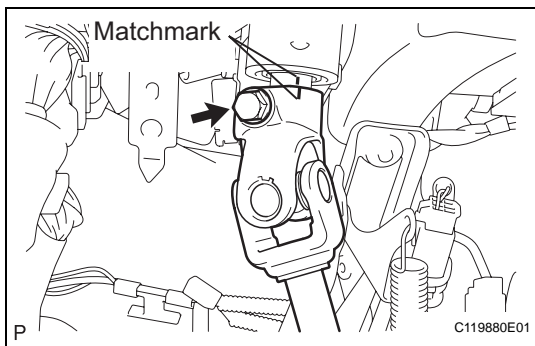

14. REMOVE STEERING COLUMN ASSEMBLY

- (a) Disconnect the connectors and wire harness clamps from the steering column.
 (b) Remove the bolt and steering column.

