


REASSEMBLY


1. INSTALL IGNITION SWITCH ASSEMBLY

- (a) Install the ignition switch to the steering column bracket with the 2 screws.

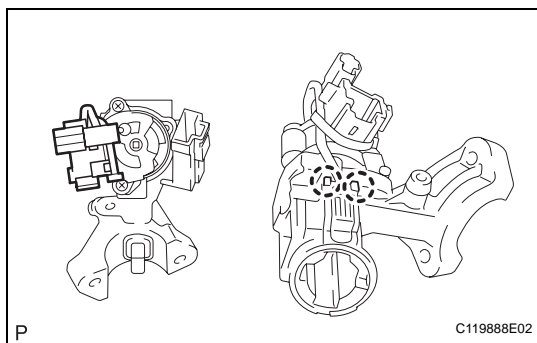

2. INSTALL UNLOCK WARNING SWITCH ASSEMBLY

- (a) Install the unlock warning switch.
- (b) Connect the unlock warning switch connector to the ignition switch.

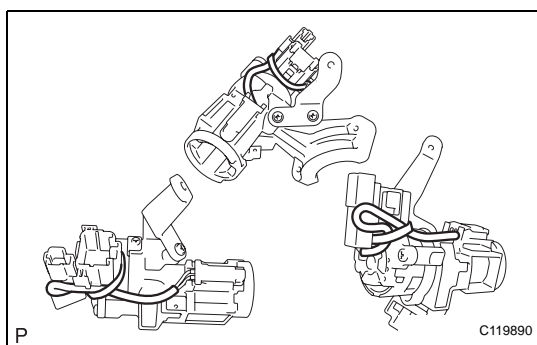

- (c) Using a new clamp, fix the wire harness of the unlock warning switch to the steering column bracket upper as shown in the illustration.

NOTICE:


When fixing the wire harness, do not tighten the clamp too hard. It could damage the wire harness inside.

3. INSTALL IGNITION SWITCH LOCK CYLINDER ASSEMBLY

- (a) Make sure that the ignition switch lock cylinder is in the ACC position.
- (b) Install the ignition switch lock cylinder.


4. INSPECT STEERING LOCK OPERATION

- (a) Check that the steering lock mechanism is activated when the key is removed.
- (b) Check that the steering lock mechanism is deactivated when the key is inserted and turned to the ACC position.

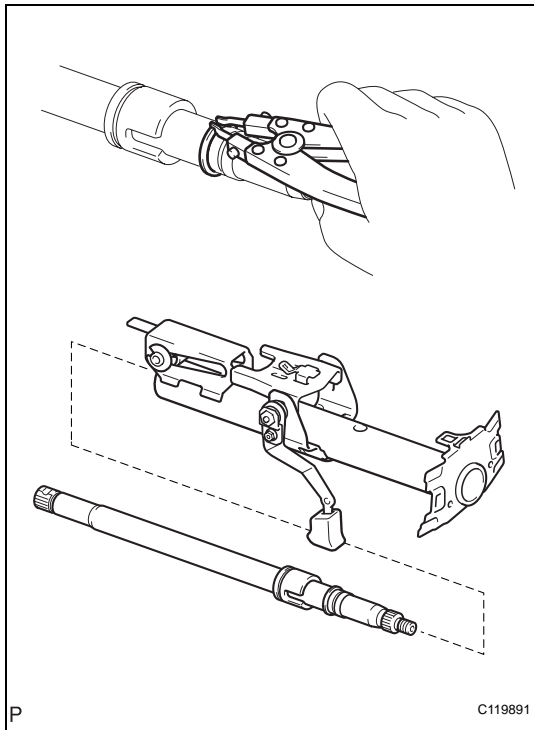


5. INSTALL STEERING MAIN SHAFT ASSEMBLY

- (a) Using a snap ring expander, install a new snap ring to the lower side.
- (b) Install the steering main shaft.

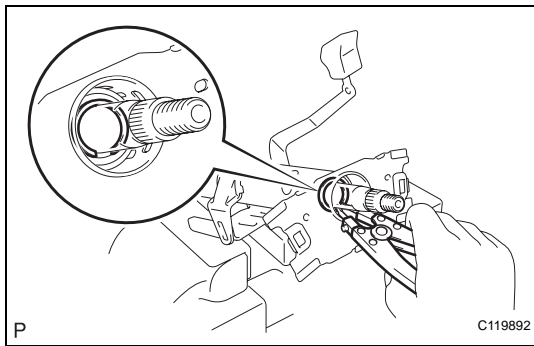


- (c) Using a snap ring expander, install a new snap ring to the upper side.

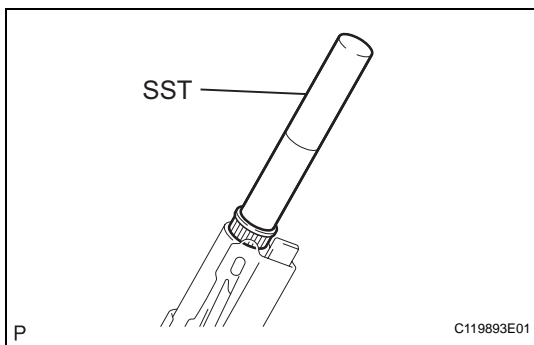

6. INSTALL STEERING MAIN SHAFT BUSH

- (a) Coat a new steering main shaft bush with molybdenum disulfide lithium base grease.
- (b) Using SST and a hammer, tap in the steering main shaft bush.

SST 09612-22011

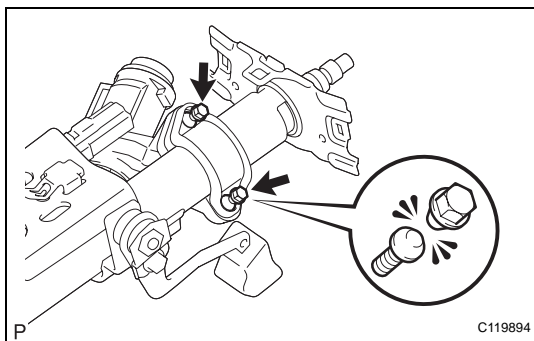

7. INSTALL STEERING COLUMN UPPER WITH SWITCH BRACKET ASSEMBLY

- (a) Temporarily install the steering column upper with switch bracket and steering column clamp upper with 2 new steering lock set bolts.
- (b) Tighten the 2 steering lock set bolts until the bolt heads break off.