

## PROBLEM SYMPTOMS TABLE

### HINT:


- Use the table below to help determine the cause of the problem symptom. The potential cases of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.
- Proceed to the troubleshooting procedures for each circuit in the table below.

### Airbag system

Symptom	Suspected area	See page
When ignition switch is in ON position, SRS warning light sometimes comes on after approximately 6 seconds	SRS warning light circuit malfunction (always lights up when DTC is not output)	<a href="#">RS-175</a>
SRS warning light comes on even when DTC is not output	SRS warning light circuit malfunction (always lights up when DTC is not output)	<a href="#">RS-175</a>
With ignition switch in ON position, SRS warning light does not come on	SRS warning light circuit malfunction (does not lights up when ignition switch is turned to ON position)	<a href="#">RS-180</a>
SRS warning light comes on normally but DTC and normal system code are not displayed	TC terminal circuit	<a href="#">RS-182</a>
Terminal TC and CG are not connected but DTC and normal system code are displayed	TC terminal circuit	<a href="#">RS-182</a>

# TERMINALS OF ECU

## 1. CENTER AIRBAG SENSOR ASSEMBLY

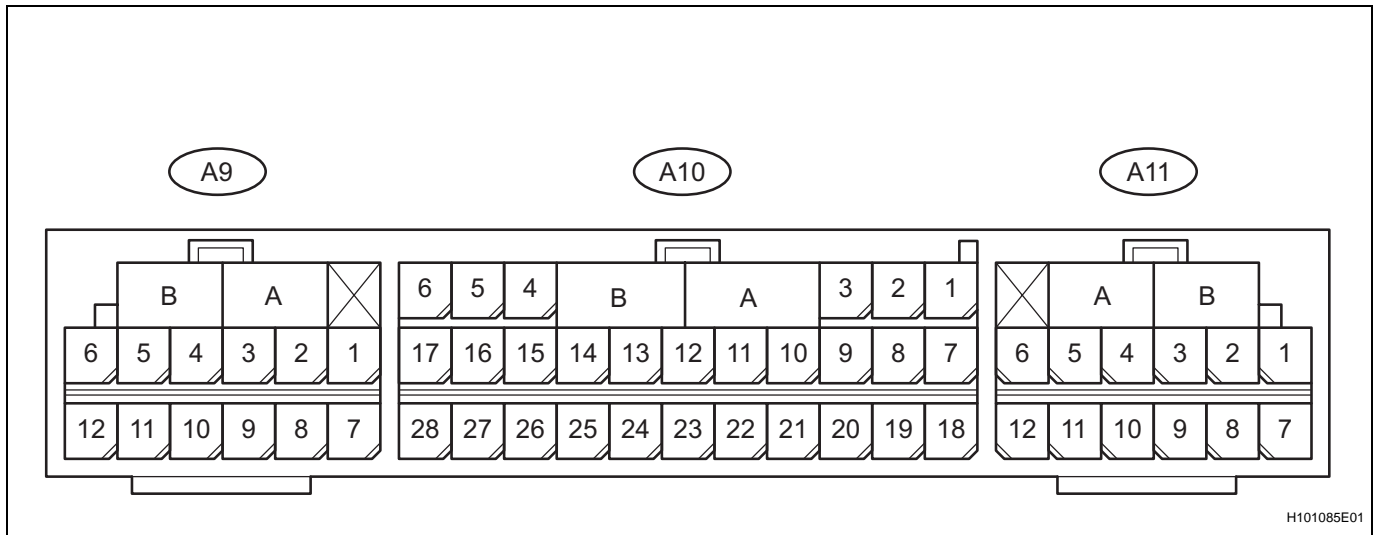

Terminal No.	Terminal Symbol	Destination
A	-	(Electrical connector check mechanism)
B	-	(Electrical connector check mechanism)
A10-3	LA	Combination meter assembly (SRS warning light)
A10-5	IG2	AM2 fuse
A10-7	P2-	Front passenger airbag assembly (front passenger side squib, 2nd step)
A10-8	P2+	
A10-9	+SR	Front airbag sensor RH
A10-10	P+	Front passenger airbag assembly (front passenger side squib)
A10-11	P-	
A10-12	SIL	DLC3
A10-13	D-	
A10-14	D+	Steering pad (driver side squib)
A10-15	+SL	Front airbag sensor LH
A10-16	D2+	
A10-17	D2-	Steering pad (driver side squib, 2nd step)
A10-19	TC	DLC3
A10-20	-SR	Front airbag sensor RH
A10-23	GSW2	ECM
A10-26	-SL	Front airbag sensor LH
A10-27	E1	Ground
A10-28	E2	
A9-1	PL-	Front seat outer belt assembly LH (Squib)
A9-2	PL+	
A9-3	LSP+	Seat position sensor
A9-7	LBE-	Front seat inner belt assembly
A9-8	LSP-	Seat position sensor
A9-11	LBE+	Font seat inner belt assembly
A11-5	PR+	Front seat outer belt assembly RH (Squib)
A11-6	PR-	
A11-8	RBE+	Front seat inner belt assembly RH
A11-12	RBE-	

RS