


## TC and CG Terminal Circuit

### DESCRIPTION

DTC output mode is set by connecting terminals TC and CG of the DLC3.  
The DTCs are displayed by blinking the SRS warning light.

### WIRING DIAGRAM

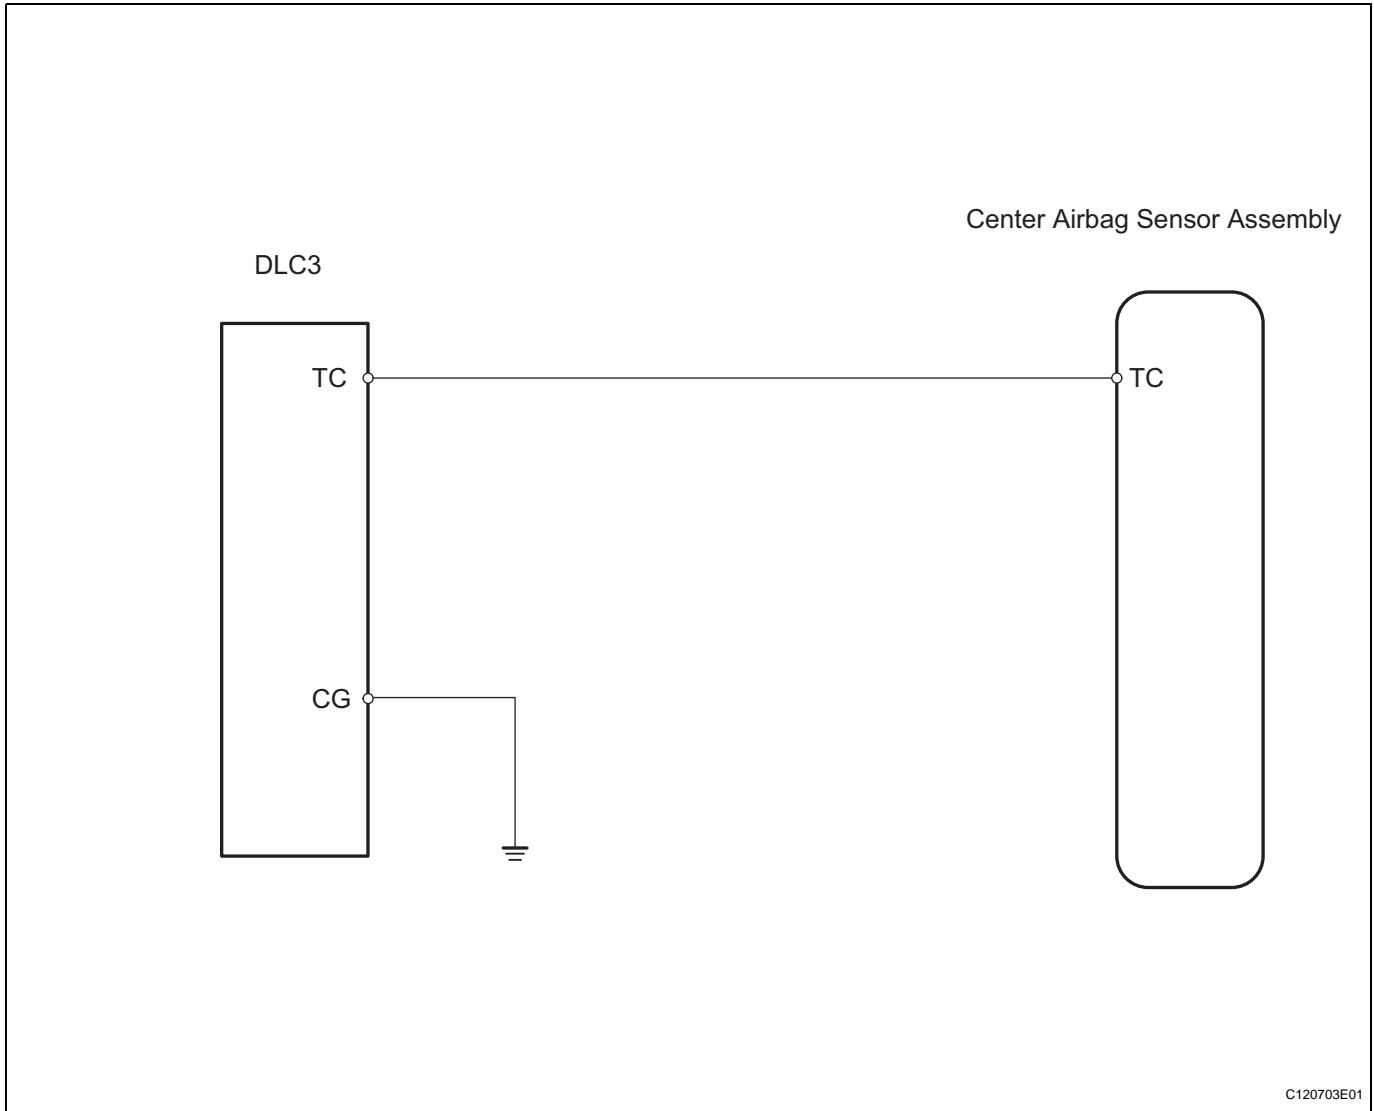


#### HINT:

When each warning light stays blinking, a ground short in the wiring of terminal TC of the DLC3 or an internal ground short in each ECU is suspected.


**1****CHECK WIRE HARNESS (DLC3 - CENTER AIRBAG SENSOR ASSEMBLY)**

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the center airbag sensor assembly connector.

DLC3

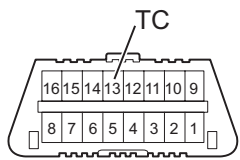

Center Airbag Sensor Assembly

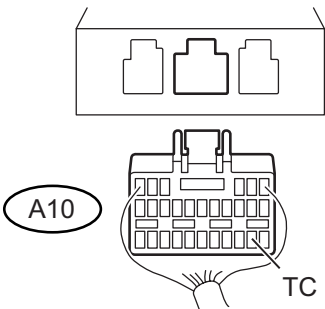

C120701E01

(c) Measure the resistance according to the value(s) in the table below.

**Standard resistance**

Tester Connection	Specified Condition
DLC3 (TC) - A10-9 (TC)	Below 1 $\Omega$


NG

**REPAIR OR REPLACE HARNESS AND CONNECTOR**

OK

**2**

**CHECK WIRE HARNESS (DLC3 - BODY GROUND)**

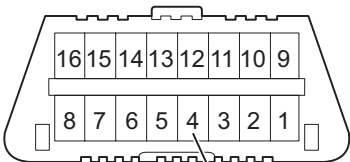

C120702E01

(a) Measure the resistance according to the value(s) in the table below.

**Standard resistance**


Tester Connection	Specified Condition
DLC3 (TC) - Body ground	Below 1 $\Omega$

NG

**REPAIR OR REPLACE HARNESS AND CONNECTOR**

OK

3 CHECK WIRE HARNESS (CENTER AIRBAG SENSOR ASSEMBLY - BODY GROUND)

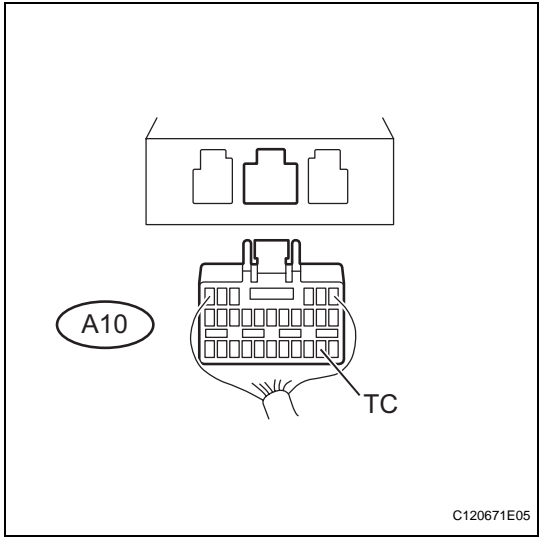

(a) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Specified Condition
A10-19 (TC) - Body ground	1 MΩ or higher

NG

REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

REPLACE CENTER AIRBAG SENSOR ASSEMBLY

RS