

INSPECTION

1. INSPECT SPIRAL CABLE SUB-ASSEMBLY

- (a) Check that there are no scratches or cracks on its connector, and that the cable does not have cracks, dents or chipping.

INSTALLATION

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

1. INSTALL SPIRAL CABLE SUB-ASSEMBLY

- (a) Check that the front wheels are facing straight ahead.

- (b) Set the turn signal switch to the neutral position.

NOTICE:

Make sure that the turn signal switch is in the neutral position, as the pin of the turn signal switch may be snapped.

- (c) Install the spiral cable.

NOTICE:

When replacing the spiral cable with a new one, remove the lock pin before installing the steering wheel.




- (d) Connect the connector to the spiral cable.

NOTICE:

When handling the airbag connector, do not damage the airbag wire harness.

2. INSTALL STEERING COLUMN COVER

- (a) Install the steering column covers with the 3 screws.

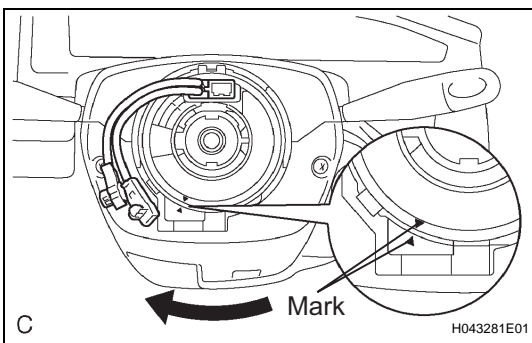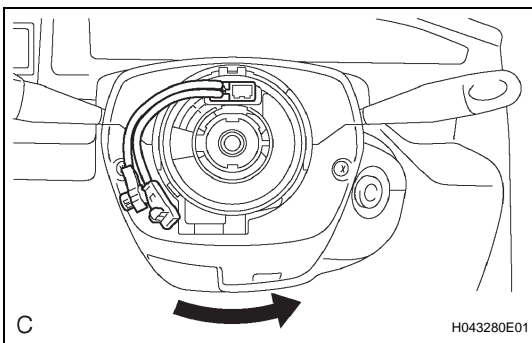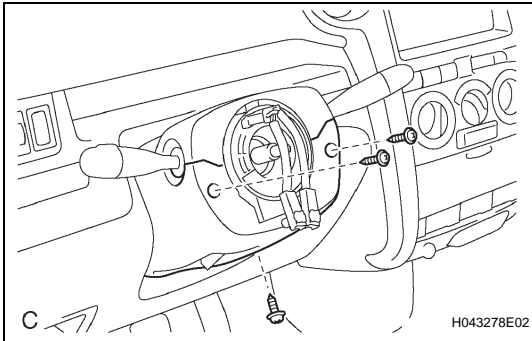

3. POSITION SPIRAL CABLE

- (a) Slowly rotate the spiral cable counterclockwise by hand until it feels firm.

NOTICE:

Do not use the airbag wire harness to turn the spiral cable.

- (b) Rotate the spiral cable clockwise approximately 2.5 turns to align the marks.

NOTICE:

Do not use the airbag wire harness to turn the spiral cable.

HINT:

The spiral cable will rotate approximately 2.5 turns to the left and right from the center.

4. INSTALL STEERING WHEEL ASSEMBLY (See page [SR-13](#))

RS

5. **INSTALL STEERING PAD ASSEMBLY** (See page [RS-188](#))
6. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
7. **INSPECT STEERING PAD ASSEMBLY** (See page [RS-188](#))
8. **CHECK SRS WARNING LIGHT**
 - (a) Check the SRS warning light (see page [RS-18](#)).
9. **INSPECT STEERING WHEEL POSITION**