


SPIRAL CABLE
COMPONENTS

RS

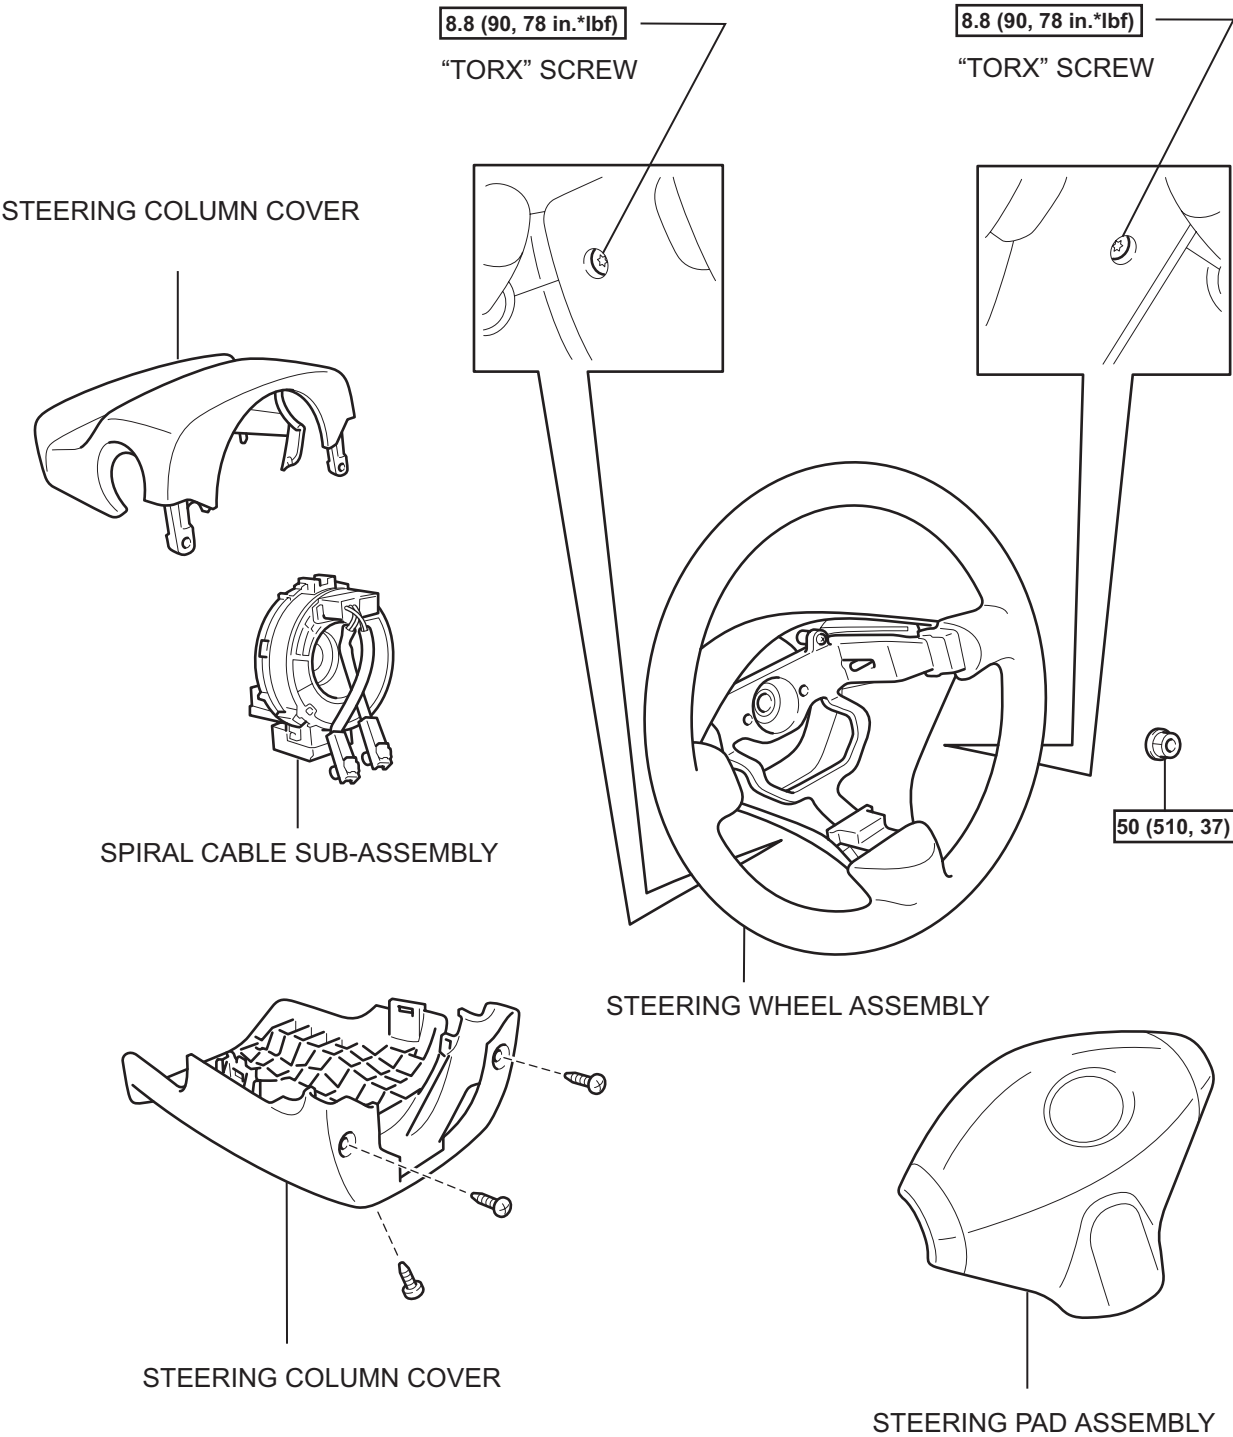

REMOVAL

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE STEERING PAD ASSEMBLY (See page [RS-187](#))
3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
4. REMOVE STEERING WHEEL ASSEMBLY (See page [SR-7](#))
5. REMOVE STEERING COLUMN COVER (See page [SR-7](#))
6. REMOVE SPIRAL CABLE SUB-ASSEMBLY
 - (a) Disconnect the airbag connector.

NOTICE:

When handling the airbag connector, do not damage the airbag wire harness.

- (b) Detach the 3 claws and remove the spiral cable.

